

Bou'G! ^ 4 - c c V



PARTNER Tepee



7-inch touch screen

GPS satellite navigation - Multimedia audio - Bluetooth® telephone



	Contents
First steps	204
Steering mounted controls	206
Menus	207
Navigation	208
Navigation - Guidance	216
Traffic	220
Radio Media	222
Radio	228
DAB (Digital Audio Broadcasting) radio	230
Media	232
Settings	234
Connected services	242
MirrorLink™	242
CarPlay®	246
Telephone	248
Frequently asked questions	256

i The system is protected in such a way that it will only operate in your vehicle.


! As a safety measure, the driver should only carry out operations which require prolonged attention while the vehicle is stationary. The display of an energy economy mode message signals that electrical systems operating are going into standby. Refer to the energy economy mode section.

First steps


Use the buttons above the touch screen for access to the menu carousel, then press the virtual buttons in the touch screen. Each menu is displayed in one or two pages (primary page and secondary page).



i In very hot conditions, the system may go into stand-by (screen and sound completely off) for a minimum period of 5 minutes.

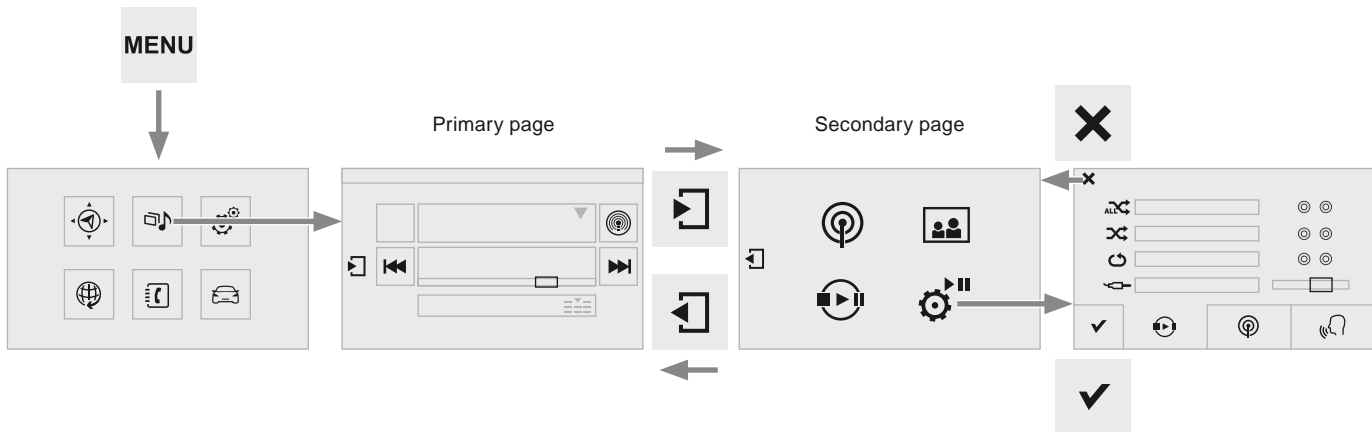


Short-cuts: using the touch buttons in the upper band of the touch screen, it is possible to go directly to the selection of the audio source or the list of stations (or titles, depending on the source).

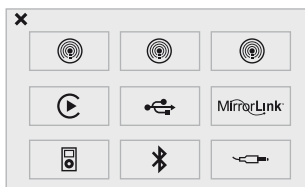

Selecting the audio source (depending on version):

- "FM" / "DAB" / "AM" stations.
- "USB" memory stick.
- Smartphone via MirrorLink™ or CarPlay®.
- Telephone connected by Bluetooth® and Bluetooth® audio streaming.
- Media player connected to the auxiliary socket (jack, cable not supplied).

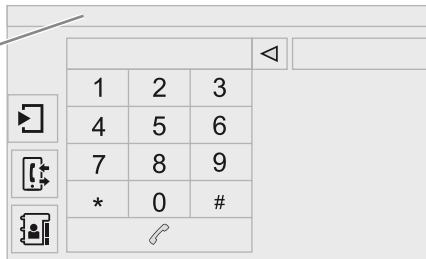

MENU

Press **Menu** to display the menu carousel.

Volume adjustment (each source is independent, including traffic announcements (TA) and navigation instructions).



Increase volume.



Reduce volume.

Mute the sound by pressing simultaneously on the volume increase and reduce buttons. Unmute the sound by pressing one of the two volume buttons.

i In very high temperatures, the volume may be limited to protect the system. The return to normal takes place when the temperature in the passenger compartment drops.

i The screen is of the "resistive" type, it is necessary to press firmly, particularly for "flick" gestures (scrolling through a list, moving the map...). A simple wipe will not be enough. Pressing with more than one finger is not recognised. The screen can be used when wearing gloves. This technology allows use at all temperatures.

! To clean the screen, use a soft non-abrasive cloth (spectacles cloth) without any additional product. Do not use pointed objects on the screen. Do not touch the screen with wet hands.

* Depending on equipment.

Steering mounted controls



Radio: select the previous/next preset station.
Media: select a genre / artist / folder from the list.
Select the previous/next entry in a menu.



Radio: automatic search for a higher frequency.
Media: Select next track.
Media, press and hold: fast forward.
Jump in the list.



Change the audio source.
Confirm a selection.
Call/end call on the telephone.
Press for more than 2 seconds: access to the telephone menu.



Radio: automatic search for a lower frequency.
Media: select previous track.
Media, press and hold: fast back.
Jump in the list.



Increase volume.



Decrease volume.



Mute: cut the sound by pressing the volume increase and decrease buttons simultaneously.
Restore the sound by pressing one of the two volume buttons.

Menus



Navigation


(Depending on equipment)



Enter navigation settings and choose a destination.




Radio Media

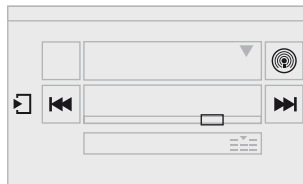

Select an audio source, a radio station, display photographs.



Settings

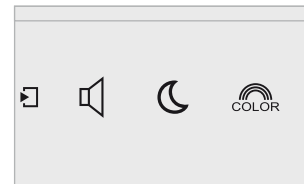


Adjust the settings for sound (balance, ambient, ...), colour schemes and the display (language, units, date, time, ...).



Connected services


(Depending on equipment)

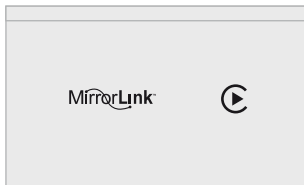

Operate certain applications on your smartphone via MirrorLink™ or CarPlay®.




Telephone

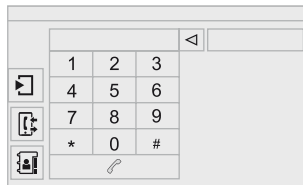

Connect a telephone by Bluetooth®. Access to the CarPlay® function after connection of your smartphone by USB cable.






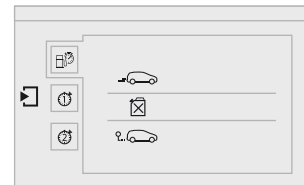





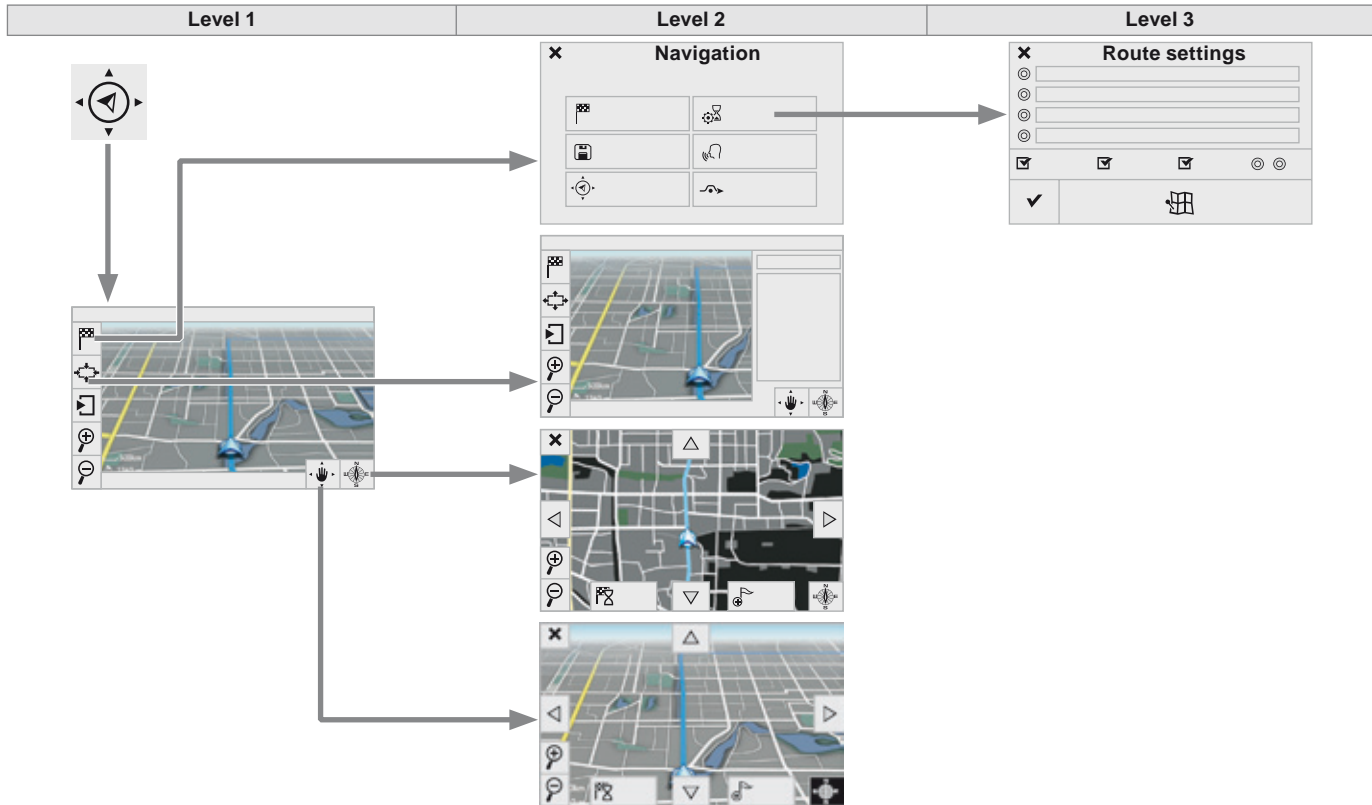






Driving












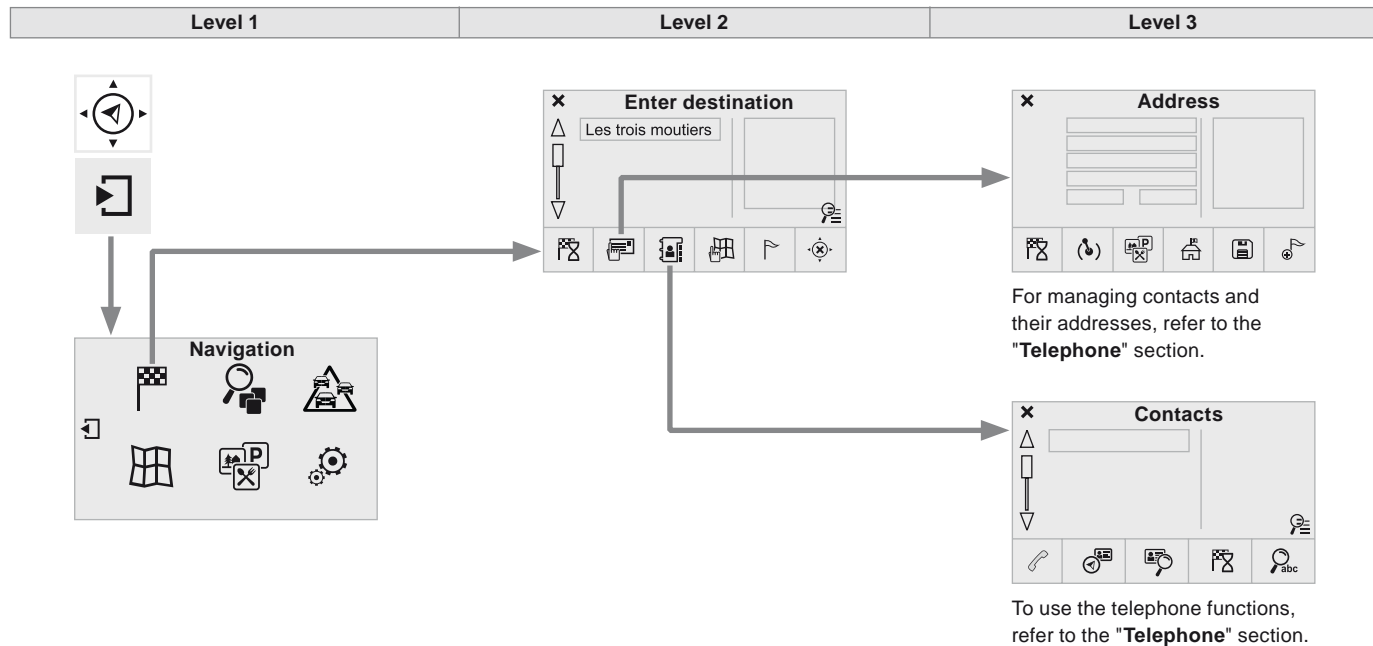











Access to the trip computer. Activate, deactivate or enter settings for certain vehicle functions.


Navigation









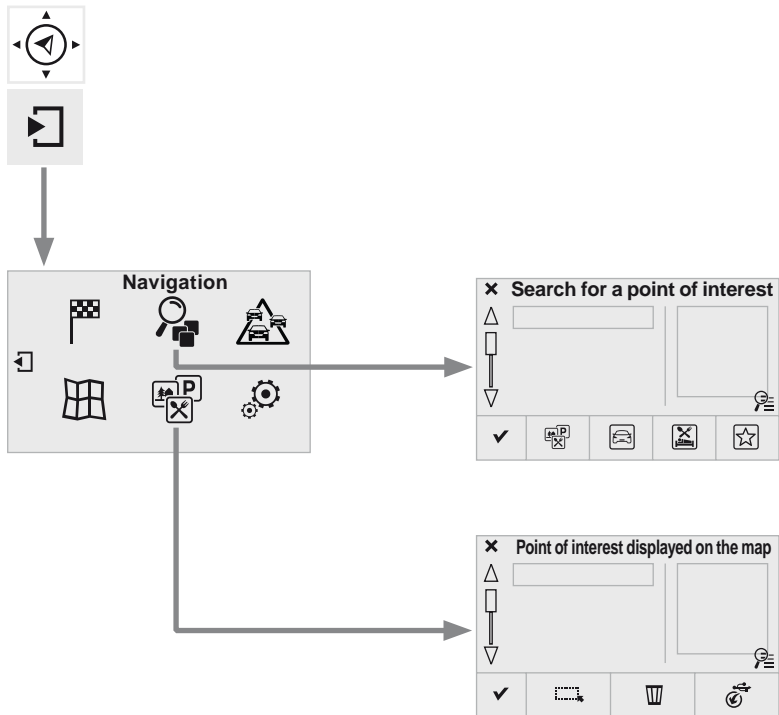






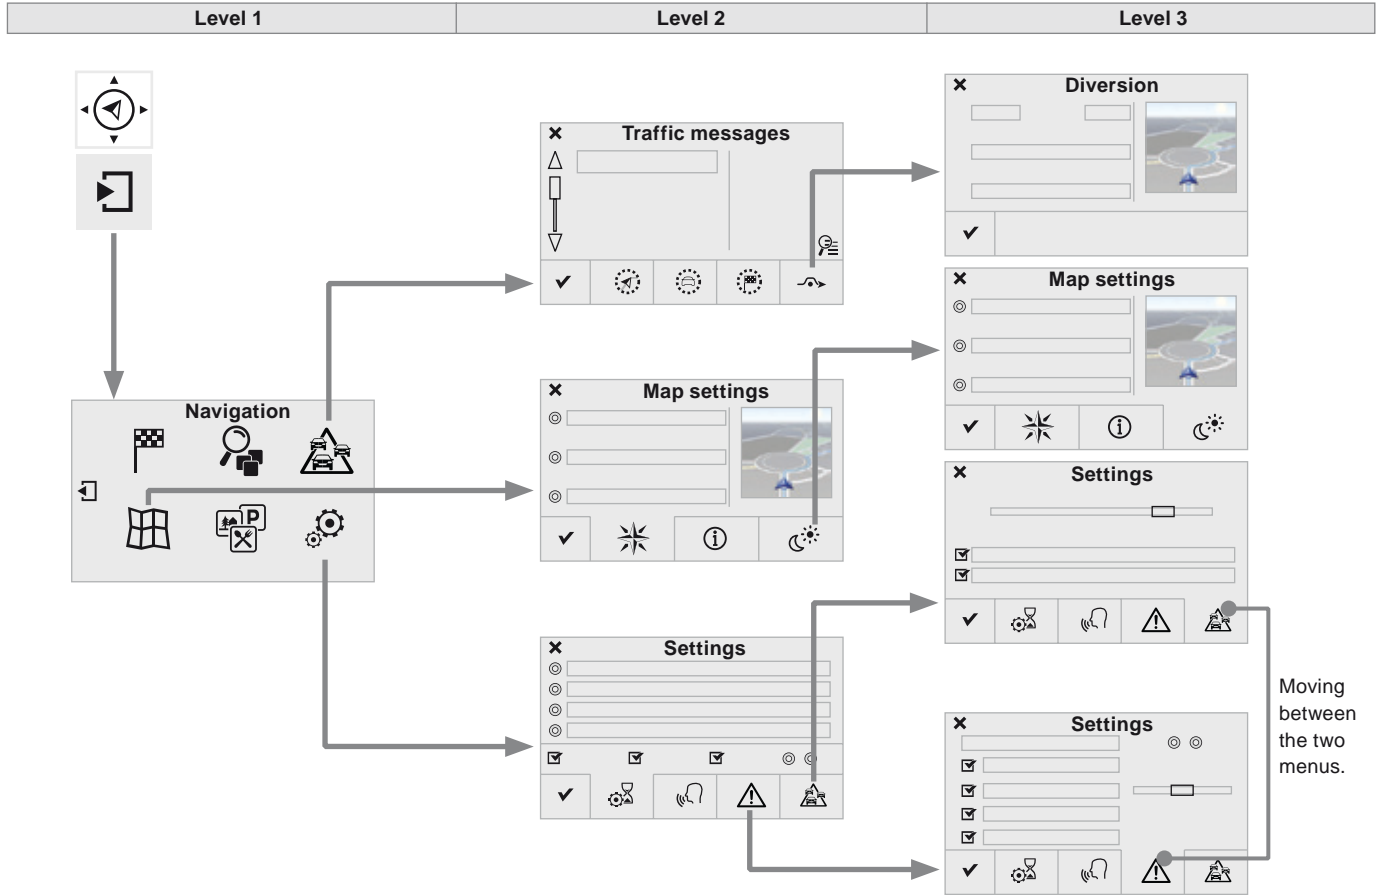
Level 1	Level 2	Level 3	Comments
  <p>Navigation ↓ Settings Navigation</p>	 <p>Enter destination</p>		Display recent destinations.
	 <p>Route settings</p>	<input type="radio"/> Fastest	Choose the navigation criteria. The map displays the route chosen according to these criteria.
		<input type="radio"/> Shortest	
		<input type="radio"/> Time/distance	
		<input type="radio"/> Ecological	
		<input checked="" type="checkbox"/> Tolls	
		<input checked="" type="checkbox"/> Ferries	
		<input checked="" type="checkbox"/> Traffic	
		<input type="checkbox"/> Strict-Close	
		 <p>Show route on map</p>	Display the map and start navigation.
	<input checked="" type="checkbox"/> Confirm	Save the options.	
	 <p>Save current location</p>		Save the current address.
	 <p>Stop navigation</p>		Delete the navigation information.
	 <p>Voice synthesis</p>		Choose the volume for voice and announcement of street names.
	 <p>Diversion</p>		Detour from your initial route by a determined distance.
 <p>Navigation</p>			Display in text mode
			Zoom in.
			Zoom out.
		<input type="checkbox"/>	Display in full screen mode. Use the arrows to move the map.
			Switch to 2D map.























Level 1		Level 2		Level 3		Comments
  	<p style="text-align: center;"> Navigation ↓ Secondary page ↓ Enter destination </p>		<p>Address</p>	 Current loc.	Address settings	
				 Point of interest		
				 Town center		
				 Save	Save the current address.	
				 Add waypoint	Add a waypoint to the route.	
				 Navigate to	Press to calculate the route.	
			<p>Contacts</p>	 Addresses	Select a contact then calculate the route.	
				 View		
				 Navigate to		
				 Search for contact		
 Call						
	<p>On the map</p>	Display the map and zoom to view the roads.				
	<p>Itinerary</p>	Create, add or delete a waypoint or view the itinerary.				
	<p>Stop</p>	Delete navigation information.				
	<p>Navigate to</p>	Press to calculate the route.				



Level 1		Level 2		Level 3	Comments
  	Navigation	 All POIs			List of categories available. After choosing the category, select the points of interest.
	↓	 Motor			
	Secondary page	 Dining/hotels			
	↓	 Personal			
	Search for POI	<input checked="" type="checkbox"/> Search		Save the settings.	
  	Navigation	 Select all			Choose the display settings for POIs.
	↓	 Delete			
	Secondary page	 Import POIs			
	↓	<input checked="" type="checkbox"/> Confirm		Save the options.	
Show POIs					



Level 1		Level 2		Level 3		Comments	
  	Navigation ↓ Secondary page ↓ Traffic messages	 On the route				Settings for the choice of messages and the filter radius.	
		 Around vehicle					
		 Near destination					
		 Detour	<input type="radio"/>	Detour over a distance			
			<input type="radio"/>	Recalculate route			
	<input checked="" type="checkbox"/> Finish					Save your selections.	
  	Navigation ↓ Secondary page ↓ Map settings	 Orientation		<input type="radio"/>	Flat view north heading	Choose the display and orientation of the map.	
				<input type="radio"/>	Flat view vehicle heading		
				<input type="radio"/>	Perspective view		
		 Maps					
		 Aspect	<input type="radio"/>	"Day" map colour			
			<input type="radio"/>	"Night" map colour			
			<input type="radio"/>	Auomatic day/night			
	<input checked="" type="checkbox"/> Confirm					Save the settings.	
  	Navigation ↓ Secondary page ↓ Settings	 Route settings				Enter settings and choose the volume for the voice and announcement of street names.	
		 Voice					
		 Alarm!					
		 Traffic options					
			<input checked="" type="checkbox"/> Confirm				

Navigation - Guidance

Choosing a new destination

Towards a new destination



Press on **Navigation** to display the primary page.



Press on the secondary page.



Select "**Enter destination**".



Select "**Address**".



Select the "**Country:**" from the list offered, then in the same way the "**City:**" or its post code, the "**Road:**", the "**N°:**". Confirm each time.



Select "**Save**" to save the address entered as a contact entry. The system allows up to 200 entries.



Select "**Navigate to**".



Choose the navigation criteria: "**Fastest**" or "**Shortest**" or "**Time/distance**" or "**Ecological**".



Choose the restriction criteria: "**Tolls**", "**Ferries**", "**Traffic**", "**Strict**", "**Close**".



Select "**Confirm**".

Or



"**Show route on map**" to start navigation.



To delete navigation information, press on "**Settings**".



Press on "**Stop navigation**".



To resume navigation press on "**Settings**".



Press on "**Resume guidance**".

Towards a recent destination



 
Press on **Navigation** to display the primary page.



Press on the secondary page.



Select "**Enter destination**".



Select an address from the list offered.



Select "**Navigate to**".



Select the criteria then "**Confirm**" or press "**Show route on map**" to start navigation.

Towards a contact



To be able to use navigation "towards a contact in the directory", it is first necessary to enter the address for your contact.



Press on **Navigation** to display the primary page.



 
Press on the secondary page.



Select "**Enter destination**".



Select "**Contacts**".



Select a destination from the contacts in the list offered.



Select "**Navigate to**".



Select the criteria then "**Confirm**" to start navigation.

Towards GPS coordinates



Press on **Navigation** to display the primary page.



 
Press on the secondary page.



Select "**Enter destination**".



Select "**Address**".



Enter the "**Longitude**:" then the "**Latitude**:".



Select "**Navigate to**".



Select the criteria then "**Confirm**" or press "**Show route on map**" to start navigation.

Towards a point on the map



Press on **Navigation** to display the primary page.



Press on the secondary page.



Select "**Enter destination**".



Select "**On the map**".

Zooming in on the map shows points with information.

A long press on a point opens its content.

Towards points of interest (POI)

Points of Interest (POI) are listed in different categories.



Press on **Navigation** to display the primary page.



Press on the secondary page.



Select "**Search for POI**".



Select "**All POIs**".

Or



"**Motor**",

Or



"**Dining/hotels**".

i An annual mapping update allows new points of interest to be presented to you.
You can also update the Risk areas / Danger areas every month.
The detailed procedure is available on:
<http://peugeot.navigation.com>.

Risk areas / Danger zone alert settings



Press on **Navigation** to display the primary page.



Press on the secondary page.



Select "**Settings**".



Select "**Alarm!**" (Alert).

It is then possible to activate Risk areas alerts then:

- "Audible warning"
- "Alert only when navigating"
- "Alert only for overspeed"
- "Display speed limits"
- Timing: the choice of timing allows the time before giving a Risk areas alert to be defined.



Select "**Confirm**".

! This series of alerts and displays is only available if Risk areas have first been downloaded and installed on the system.

Traffic

Traffic information

Display of messages



Press on **Navigation** to display the primary page.



Press on the secondary page.



Select "**Traffic messages**".

Choose filter settings for:



"**On the route**",



"**Around**",



"**Near destination**", filters to fine-tune the list of messages.

Press again to remove the filter.



Select the message from the list offered.



Select the magnifying glass to have voice information.

i TMC (Traffic Message Channel) messages on GPS-Navigation contain traffic information transmitted in real time.

Setting filters



Press on **Navigation** to display the primary page.



Press on the secondary page.



Select "**Settings**".



Select "**Traffic options**".



Select:
- "**Be advised of new messages**",
- "**Speak messages**".

Then enter the filter radius.



Select "**Confirm**".

i We recommend a filter radius of:

- 12 miles (20 km) in urban areas,
- 30 miles (50 km) on motorways.

Receiving TA messages



Press on **Navigation** to display the primary page.



Press on the secondary page.



Select "**Settings**".




Select "**Voice**".









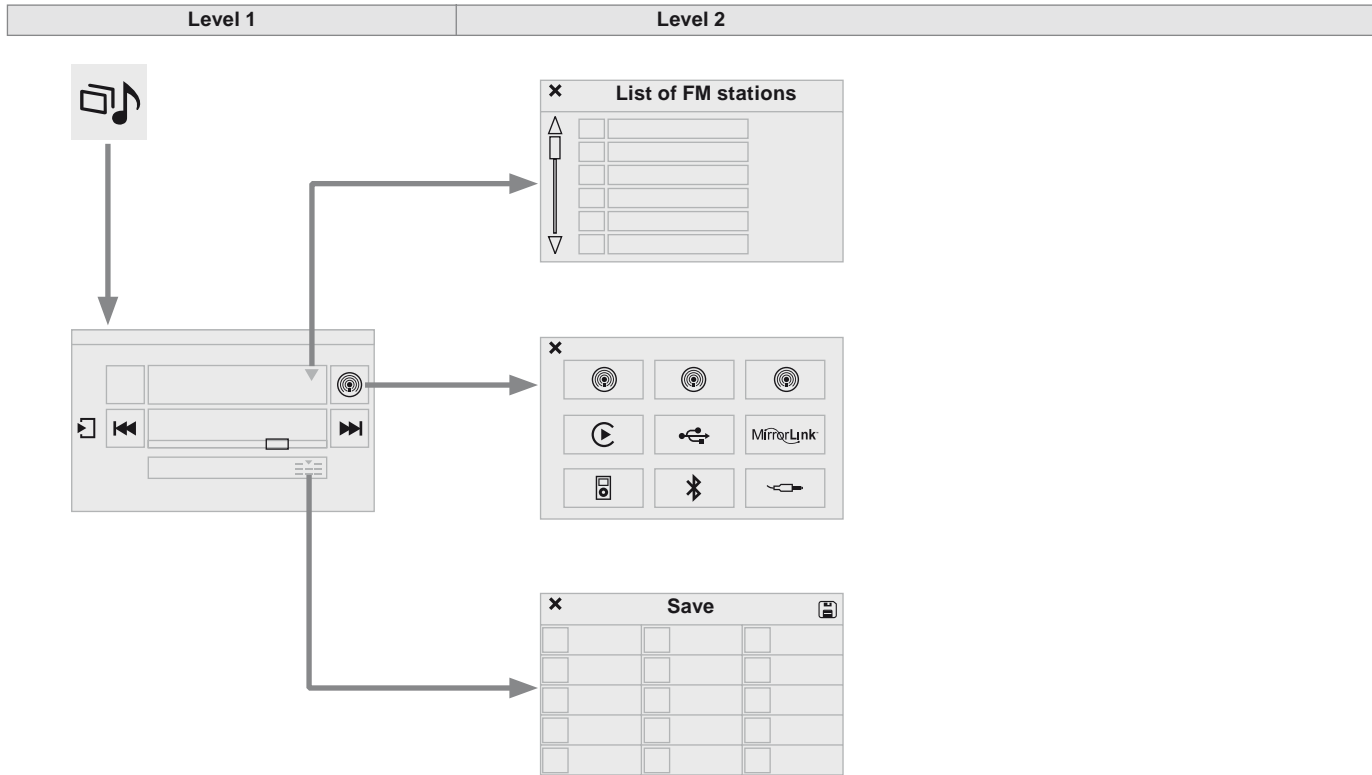








Off On


Activate / Deactivate "**Traffic (TA)**".









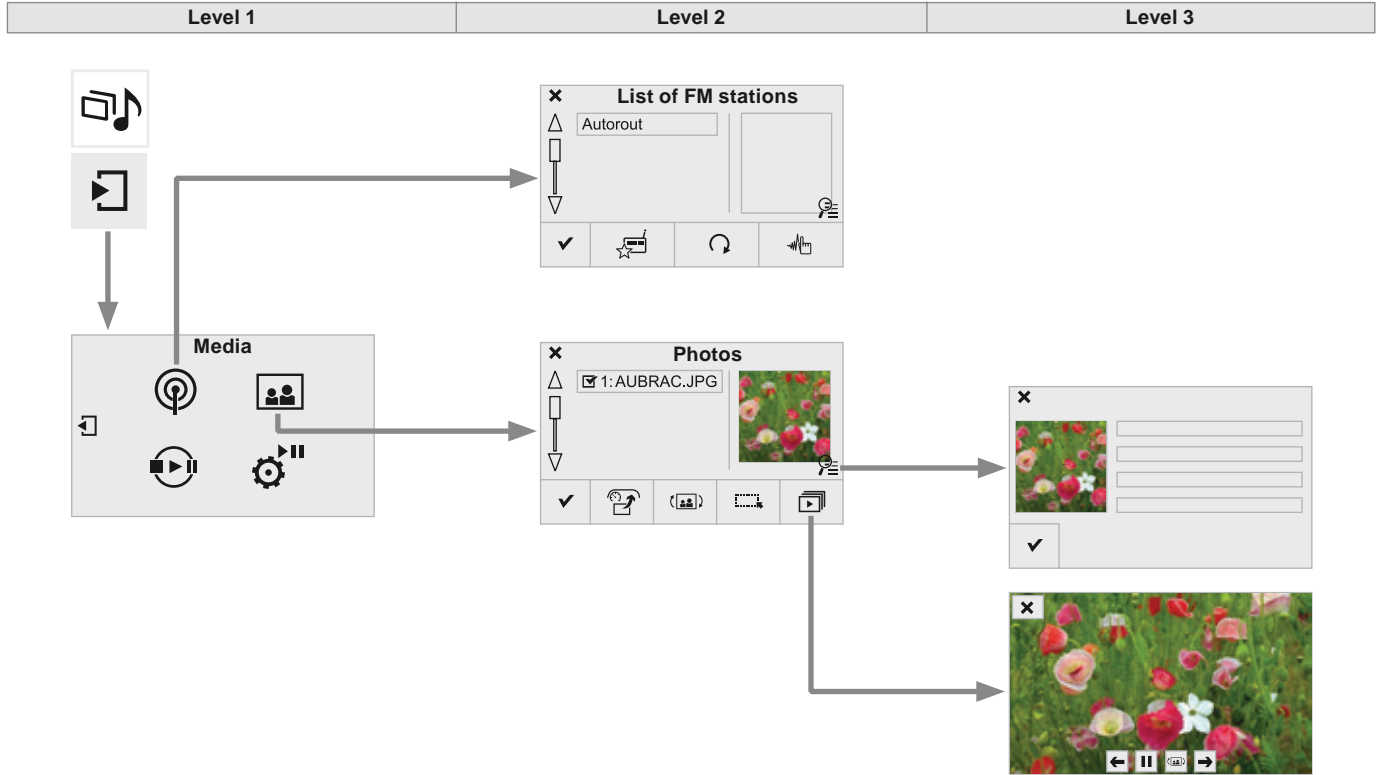









i The TA (Traffic Announcement) function gives priority to TA alert messages. To operate, this function needs good reception of a radio station transmitting this type of message. When a traffic report is transmitted, the current audio source is interrupted automatically to play the TA message. Normal playback of the audio source resumes at the end of the transmission of the message.

Radio Media












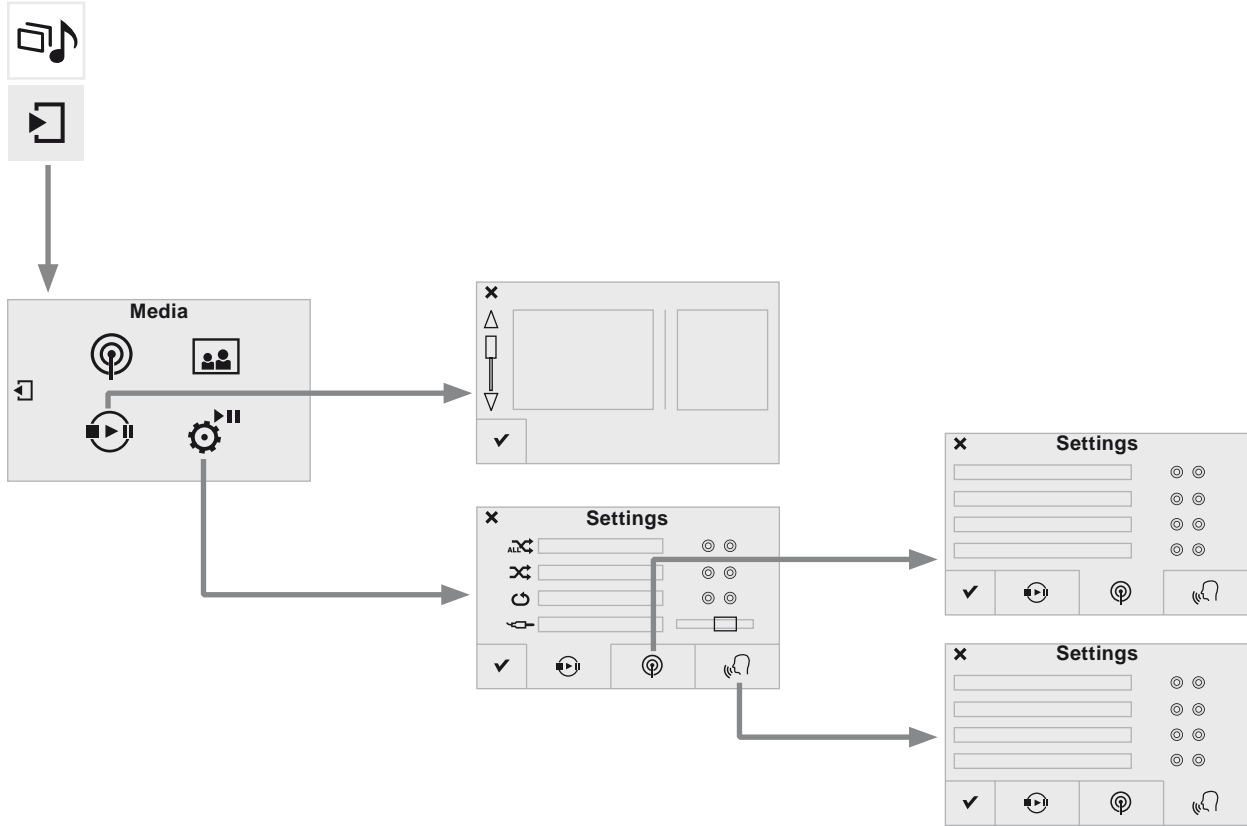



Level 1		Level 2		Comments
 	Radio Media ↓ List		List of FM stations	Press on a radio station to select it.
 	Radio Media ↓ Source	 FM Radio  DAB Radio  AM Radio  USB  MirrorLink  CarPlay  iPod  Bluetooth  AUX		Select change of source.
 	Radio Media ↓ Save (preset)			Press an empty location to Save it.



Level 1		Level 2		Level 3		Comments
  	<p>Radio Media ↓ Secondary page ↓ Radio list</p>	 Save				Press a radio station to select it.
		 Update list				Update the list of stations received.
		 Frequency				Enter the desired radio frequency.
		 Confirm				Save the settings.
  	<p>Radio Media ↓ Secondary page ↓ Photos</p>	 Home screen				Display the selected photo in the home page.
		 Rotate				Rotate the photo 90°.
		 Select all				Select all the photos in the list. Press again to deselect.
		 Slideshow	 Previous photo.			Display the photos in sequence, full-screen. The system supports the following image formats: .gif, .jpg, .bmp, .png.
			 Pause / Play.			
			 Next photo.			
 Full screen				Display the selected photo full-screen.		

Audio and Telematics



Level 1		Level 2		Level 3		Comments	
	Radio Media					Presentation of the last media used.	
	Secondary page						
	Media list						
	Radio Media ↓ Secondary page ↓ Settings		Media ↓ Settings	 Shuffle (all tracks)	Choose the play settings.		
				 Shuffle (current album)			
				 Repeat			
				 Aux. amplification			
			Radio ↓ Settings	<input type="checkbox"/> RDS options	Activate or deactivate the settings.		
				<input type="checkbox"/> DAB/FM station tracking			
				<input type="checkbox"/> Display Radio Text			
				<input type="checkbox"/> Digital radio slideshow display			
			Announcements ↓ Settings	<input type="checkbox"/> Traffic announcements (TA)	Activate or deactivate the settings.		
				<input type="checkbox"/> News - Weather			
				<input type="checkbox"/> Sport - Programm info			
				<input type="checkbox"/> Flash - Unforeseen events			
			Confirm				Save the settings.

Radio

Selecting a station



Press on **Radio Media** to display the primary page.



Select "**List**" in the primary page.

Or



 
Press on **Radio Media** to display the primary page.



Press on the secondary page.



Select "**Radio list**" in the secondary page.



Select a radio station from the list offered.



Select "**Update list**" to refresh the list.

To select a preset radio station.



Press on **Radio Media** to display the primary page.



Select "**Save**".



Select a preset radio station in the list.



If necessary, select change of source.



Select "**FM Radio**".

Or



 
"**AM Radio**".

! Radio reception may be affected by the use of electrical equipment not approved by PEUGEOT, such as a USB charger connected to the 12 V socket. The exterior environment (hills, buildings, tunnel, car park, below ground...) may prevent reception, even in RDS station tracking mode. This phenomenon is normal in the propagation of radio waves and is in no way indicative of a fault with the audio system.


Changing a radio frequency



Press on **Radio Media** to display the primary page.



By automatic frequency search

 

Press ◀ or ▶ to move the cursor for an automatic search down or up for a radio frequency.

THEN



Select change source.



Select "**FM Radio**".

Or



"**AM Radio**".

OR



Press on **Radio Media** to display the primary page.



Press on the secondary page.



Press on **Frequency**.

THEN



Enter the frequency in full (e.g.: 92.10 MHz) using the keypad then "**Confirm**".

FRANCE BLEU

Changing radio station

Pressing the name of the current radio station brings up a list.

To change radio station press the name of the desired station.

Presetting a station

Select a radio station or frequency (refer to the corresponding section).



Press on "**Save**" (preset).

Mémoire 1

Select a number in the list to preset the previously chosen radio station.

A long press on a number saves (presets) the station.

Or



A press on this button presets all of the stations one after the other.

Recalling preset stations



Press on **Radio Media** to display the primary page.



Select "**Save**" (preset).

Activating / Deactivating RDS



Press on **Radio Media** to display the primary page.



Press on the secondary page.



Select "**Settings**".




Select "**Radio**".

Off On Activate/deactivate "**RDS options**".

i RDS, if activated, allows you to continue listening to the same station by automatic retuning to alternative frequencies. However, in certain conditions, coverage of an RDS station may not be assured throughout the entire country as radio stations do not cover 100 % of the territory. This explains the loss of reception of the station during a journey.

DAB (Digital Audio Broadcasting) radio

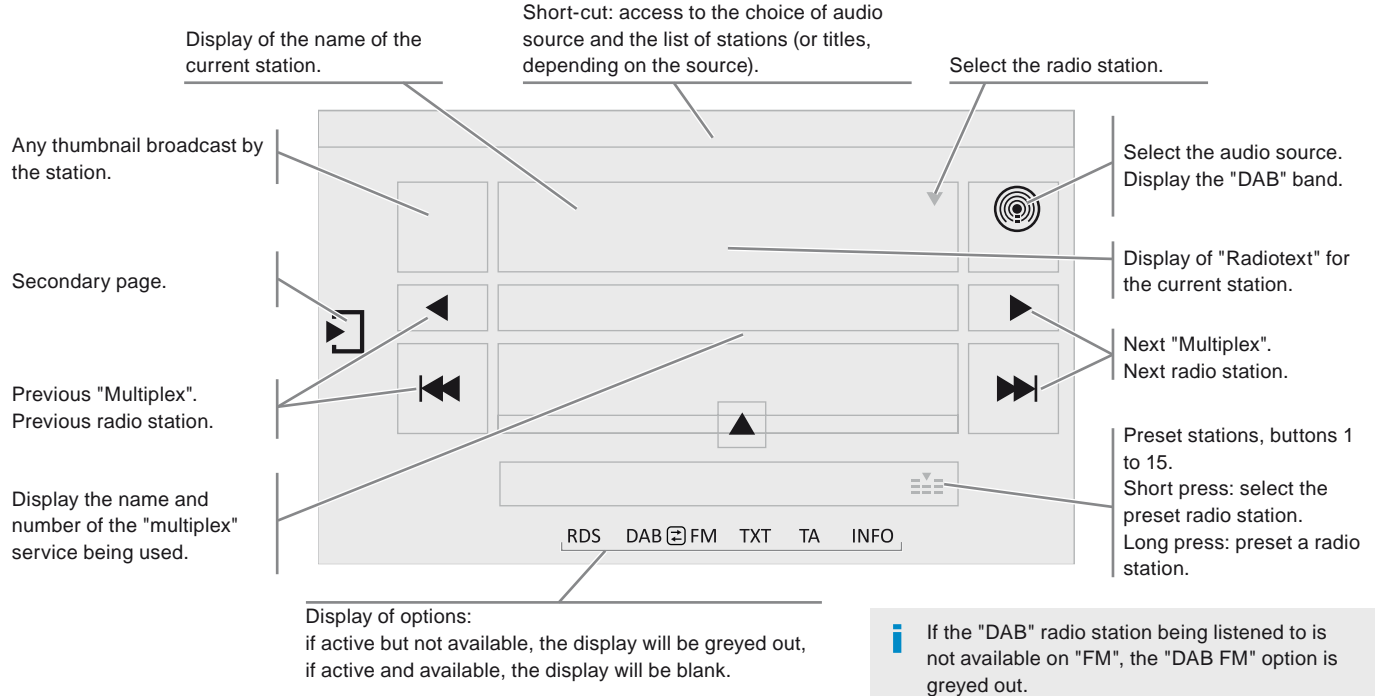

! Journaline® is a text-based information service designed for digital radio systems. It provides text-based information structured around topics and sub-topics. This service is available from the "LIST OF DAB STATIONS" page.

Digital radio

- ! Digital radio provides higher quality reception and also the graphical display of current information on the radio station being listened to. Select "List" in the primary page.
The range of multiplexes available is displayed in alphabetical order.



Press on **Radio Media** to display the primary page.



Select change of source.



Select "**DAB Radio**".



Select "**List**" in the primary page.

or

Select "**Radio list**" in the secondary page.

Select the radio station from the list offered.

DAB / FM auto tracking

- i "DAB" does not cover 100% of the territory.
When the digital radio signal is poor, "DAB/FM station tracking" allows you to continue listening to the same station, by automatically switching to the corresponding "FM" analogue station (if there is one).



Press on **Radio Media** to display the primary page.



 
Press on the secondary page.



Select "**Settings**".



Select "**Radio**".




Select "**Digital/FM auto tracking**" then "**Confirm**".

- i If "DAB/FM station tracking" is activated, there is a difference of a few seconds when the system switches to "FM" analogue radio with sometimes a variation in volume.
When the digital signal is restored, the system automatically changes back to "DAB".

- ! If the "DAB" station being listened to is not available on "FM" ("**DAB/FM**" option greyed out), or "DAB/FM station tracking" is not activated, the sound will cut out while the digital signal is too weak.

Media

USB port

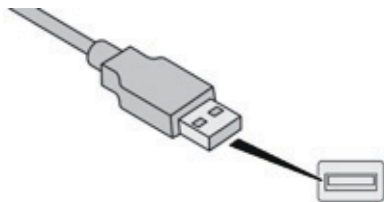

Insert the USB memory stick into the USB port or connect the USB device to the USB port using a suitable cable (not supplied).

! To protect the system, do not use a USB hub.

The system builds playlists (in temporary memory), an operation which can take from a few seconds to several minutes at the first connection.
Reduce the number of non-music files and the number of folders to reduce the waiting time.
The playlists are updated every time the ignition is switched off or on connection of a USB memory stick. The lists are memorised: if they are not modified, the subsequent loading time will be shorter.

Auxiliary socket (AUX)



This source is only available if the "Auxiliary socket" option has been activated in the "Media" settings.

Connect the portable device (MP3 player...) to the auxiliary Jack socket using an audio cable (not supplied).

First adjust the volume of your portable device (to a high level). Then adjust the volume of your audio system.
Display and management of the controls are via the portable device.


Selection of source



Press on **Radio Media** to display the primary page.



Select change of source.

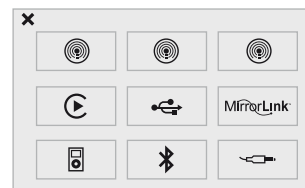

Choose the source.



The steering mounted **SRC** (source) button can be used to go to the next media source, available if the source is active.

Information and advice

The audio system will only play audio files with ".wma, .aac, .flac, .ogg and .mp3" file extensions and with a bit rate of between 32 Kbps and 320 Kbps.
It also supports VBR (Variable Bit Rate) mode. No other type of file (.mp4, ...) can be played.
".wma" files must be of the standard wma 9 type.
The sampling rates supported are 32, 44 and 48 KHz.

It is advisable to restrict file names to 20 characters, without using special characters (e.g. " " ? ; ù) to avoid any playing and displaying problems.

! The system supports USB mass storage portable players, BlackBerry® devices or Apple® players via USB ports. The adaptor cable is not supplied. Control of the peripheral device is with the audio system controls. Other peripheral devices, not recognised by the system on connection, must be connected to the auxiliary socket using a Jack cable (not supplied).

Use only USB memory sticks formatted FAT32 (file allocation table).

! To protect the system, do not use a USB hub.

i It is recommended that the USB cable for the portable device is used.

Bluetooth® audio streaming

Streaming allows audio files on your telephone to be played through the vehicle's speakers.


Connect the telephone: see the "**Telephone**" section, then "**Bluetooth**". Choose the "**Audio**" or "**All**" profile.

If play does not start automatically, it may be necessary to start the audio playback from the telephone.

Control is from the peripheral device or by using the audio system buttons.

! Once connected in streaming mode, the telephone is considered to be a media source. It is recommended that you activate "**Repeat**" on the Bluetooth® peripheral.

Connecting Apple® players

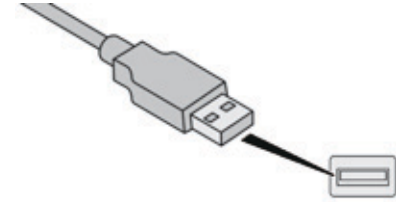











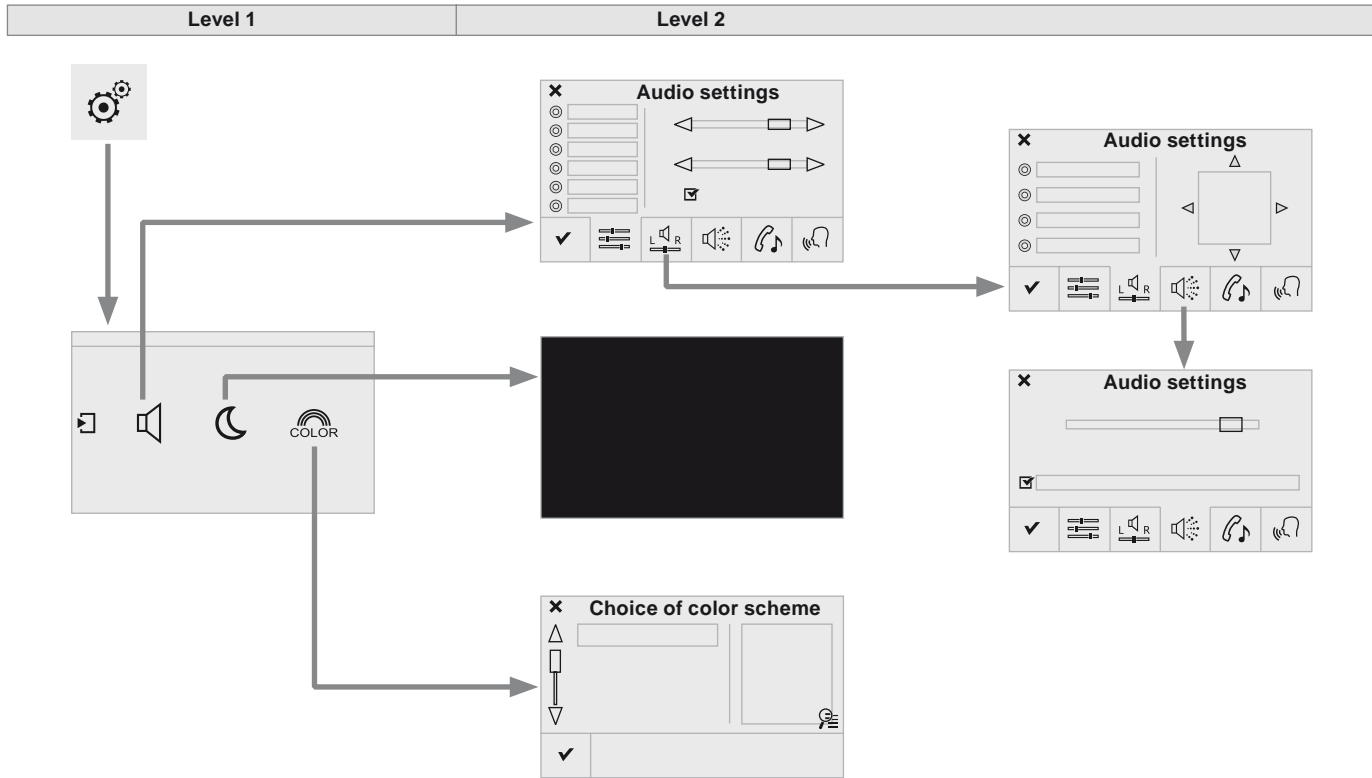




Connect the Apple® player to the USB port using a suitable cable (not supplied). Play starts automatically. Control is via the audio system.

 
i The classifications available are those of the portable device connected (artists / albums / genres / playlists / audiobooks / podcasts). The default classification used is by artist. To modify the classification used, return to the first level of the menu then select the desired classification (playlists for example) and confirm to go down through the menu to the desired track.







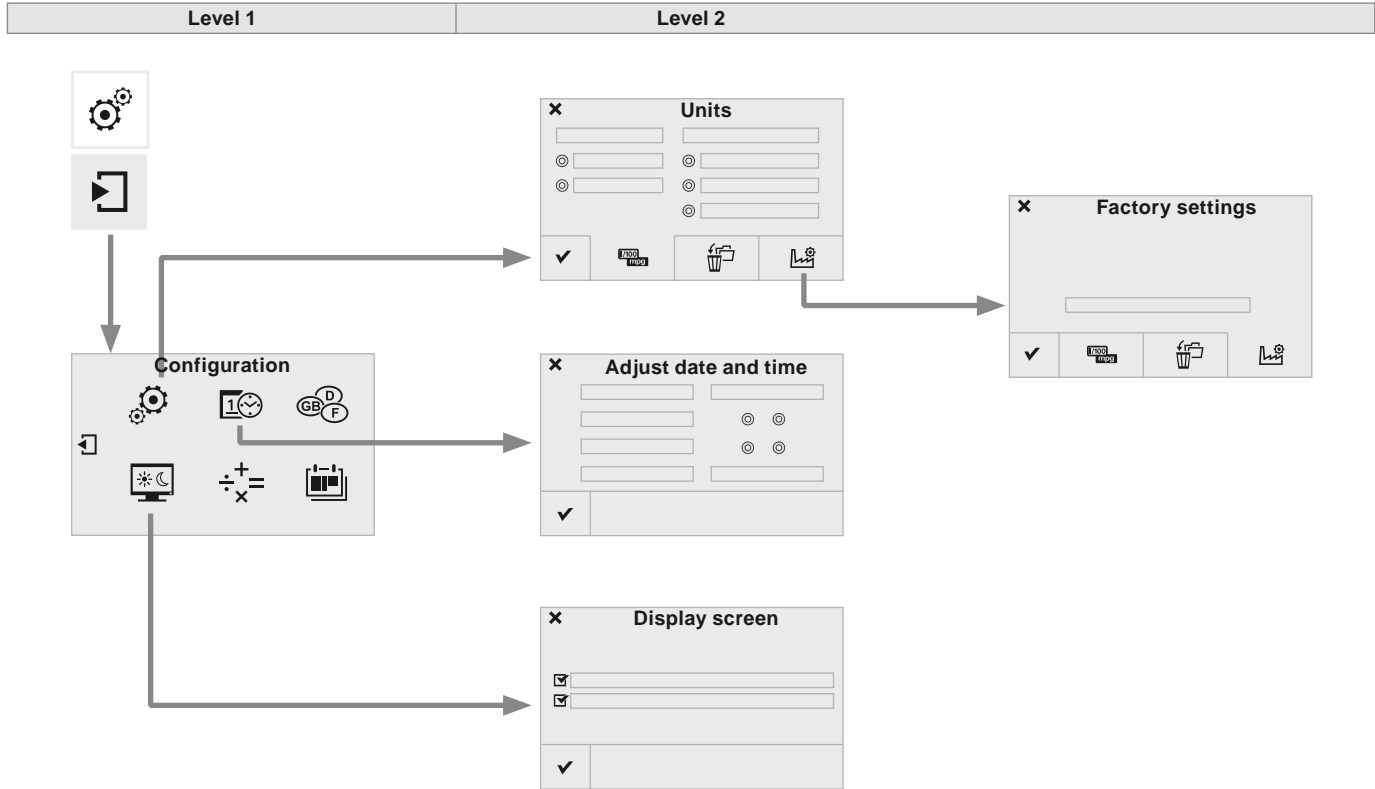


 





The version of software in the audio system may not be compatible with the generation of your Apple® player.


Settings






 

 



Level 1		Level 2		Comments
 	Settings ↓ Audio settings		Ambience	Choose the sound ambience.
			Balance	Sound distribution using the Arkamys® system.
			Sound effects	Set the volume or activate the link to vehicle speed.
			Ringtones	Set the telephone ringtone and volume.
			Voice	Set the volume and voice for speaking street names
			Confirm	Save your settings.
 	Settings ↓ Turn off screen			Function that turns off the display. Pressing the screen reactivates it.
 	Settings ↓ Color schemes		Confirm	Choose the color scheme, then confirm to save the setting.

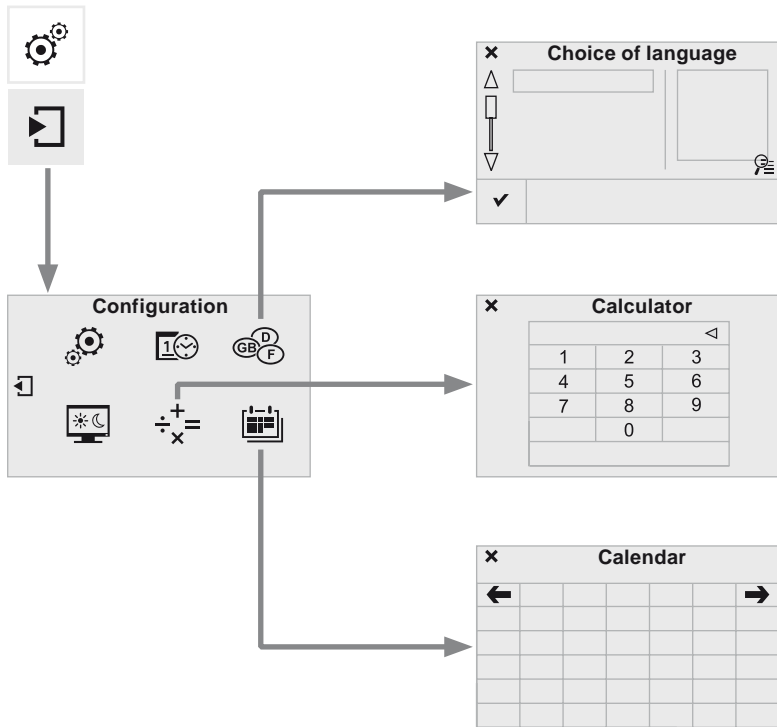

Level 1		Level 2		Comments
  	Settings ↓ Secondary page ↓ System Settings	 Units	Set the units used to display distance, fuel consumption and temperature.	
		 Delete data	Select the desired data in the list then press Delete.	
		 Factory settings	Return to factory settings.	
		 Confirm	Save the settings.	
  	Settings ↓ Secondary page ↓ Time/Date	 Confirm	Set the date and time then confirm.	
  	Settings ↓ Secondary page ↓ Screen settings	<input checked="" type="checkbox"/> Activate automatic text scrolling	Activate or deactivate the setting then confirm.	
	<input checked="" type="checkbox"/> Activate animations			
	 Confirm			



Level 1		Level 2		Comments
  	<p>Settings</p> <p>↓</p> <p>Secondary page</p> <p>↓</p> <p>Languages</p>	✓	Confirm	Select the language then confirm.
  	<p>Settings</p> <p>↓</p> <p>Secondary page</p> <p>↓</p> <p>Calculator</p>			Select the calculator.
  	<p>Settings</p> <p>↓</p> <p>Secondary page</p> <p>↓</p> <p>Calendar</p>			Select the calendar.

Audio settings



Press on **Settings** to display the primary page.



Select "**Audio settings**".



Select "**Ambience**".

Or



"**Balance**"

Or



"**Sound effects**"

Or



"**Ringtones**"

Or



"**Voice**".

! The distribution (or spatialisation using the Arkamys® system) of sound is an audio process that allows the audio quality to be adapted to the number of passengers in the vehicle. Available only with the 6-speaker configuration.

! The audio settings (**Ambience**, **Bass**, **Treble**: and **Loudness**) are different and independent for each sound source. The settings for **Distribution** and **Balance** are common to all sources.

!

- "**Ambience**" (choice of 6 musical ambiances)
- "**Bass**:"
- "**Treble**:"
- "**Loudness**" (Activate/Deactivate)
- "**Distribution**" ("**Driver**", "**All passengers**", "**Front only**")
- "**Audible response from touch screen**"
- "**Volume linked to speed**" (Activate/Deactivate)

i On-board audio: Arkamys® Sound Staging optimises sound distribution in the passenger compartment.

Color schemes



Press on **Settings** to display the primary page.



Select "**Color schemes**".

 


Select the color scheme in the list then "**Confirm**".


i At each change of color scheme the system restarts, showing a black screen for a few moments.

! As a safety measure, the procedure for changing the color scheme is only possible with the vehicle stationary.


Modifying system settings



 
Press on **Settings** to display the primary page.



Press on the secondary page.

 


Select "**System Settings**".

 


Select "**Units**" to change the units of distance, fuel consumption and temperature.



 
Select "**Delete data**" to delete the list of recent destinations, personal points of interest, contacts in the list.



 
Choose the item then select "**Delete**".



 
Select "**Factory settings**" to return to the original settings.



 
Press on **Settings** to display the primary page.




Press on the secondary page.

 


Select "**Screen settings**".

 

 
Activate or deactivate "**Activate automatic text scrolling**" and "**Activate animations**".



 Press on **Settings** to display the primary page.




Press on the secondary page

 


Select "**Time/Date**" to change the time zone, synchronisation with GPS, the time and its format, then the date.

 
i The system does not manage changes between summer time and winter time automatically (according to country).



 Select "**Languages**" to change language.



 
Select "**Calculator**" to display a calculator.



Select "**Calendar**" to display a calendar.

Connected services

MirrorLink™

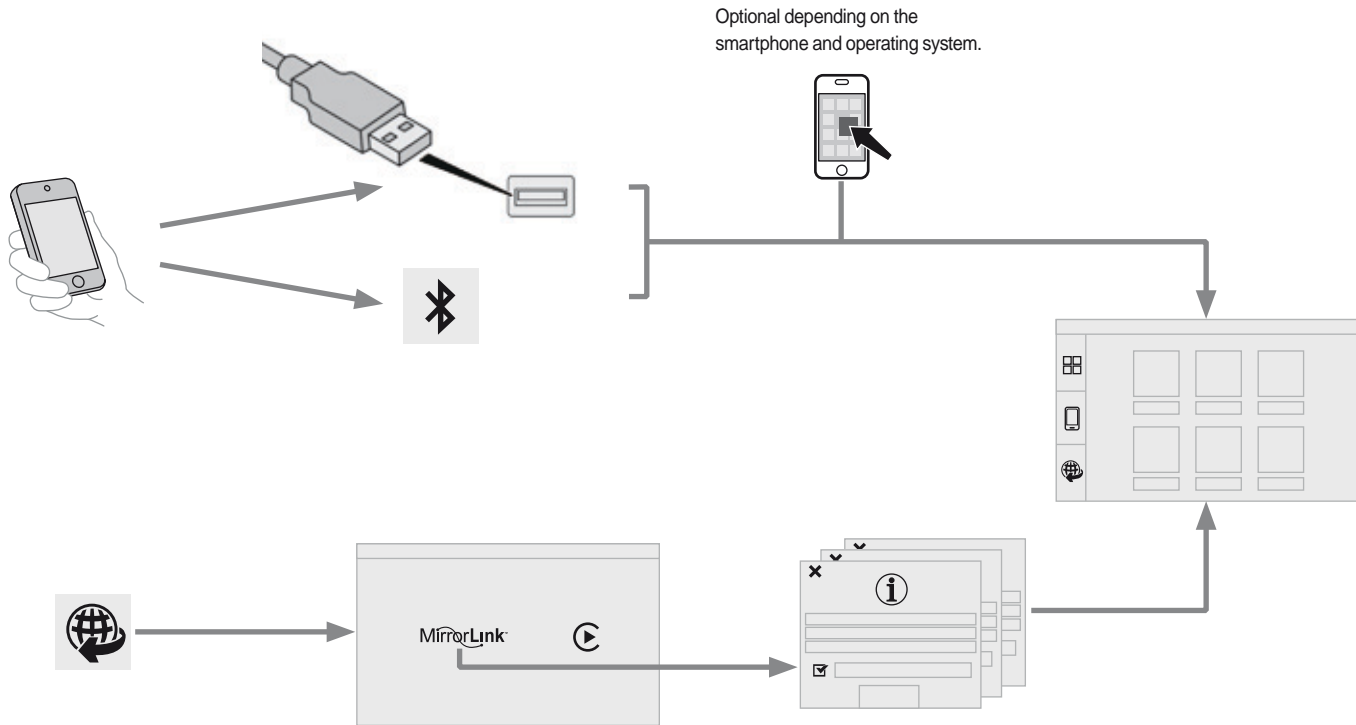

MirrorLink™ smartphone connection

! As a safety measure and because it requires sustained attention by the driver, using a smartphone when driving is prohibited. All operations must be done with the **vehicle stationary**.

i The synchronisation of a smartphone allows applications on a smartphone that are adapted to the MirrorLink™ technology to be displayed in the vehicle's screen. The principles and standards are constantly evolving. For the communication process between the smartphone and the system to work correctly, the smartphone must be unlocked; update the operating system of your smartphone as well as the date and time in the smartphone and the system. For the list of eligible smartphones, connect to the brand's internet website in your country.



As a safety measure, applications can only be viewed with the vehicle stationary; display is interrupted once the vehicle is moving.



Please note:

- if your smartphone is supported, to make it "MirrorLink™" compatible, some phone manufacturers nevertheless invite you to first download a dedicated application.



When connecting a smartphone to the system, it is recommended that Bluetooth® be started on the smartphone.



Connect a USB cable. The smartphone charges when connected by a USB cable.



From the system, press on "**Connected services**" to display the primary page.



Press on "**MirrorLink™**" to start the application in the system.



Start the application on the smartphone (optional, depending on the smartphone and operating system).

OK

During the procedure, several screen pages relating to certain functions are displayed. Accept to start and end the connection.


Once connection is established, an page is displayed with the applications already downloaded to your smartphone and adapted to MirrorLink™ technology. If only one application has been downloaded to the smartphone, it starts automatically.






Access to the different audio sources remains accessible in the margin of the MirrorLink™ display, using touch buttons in the upper bar. Access to the menus for the system is possible at any time using the dedicated buttons

Voice recognition

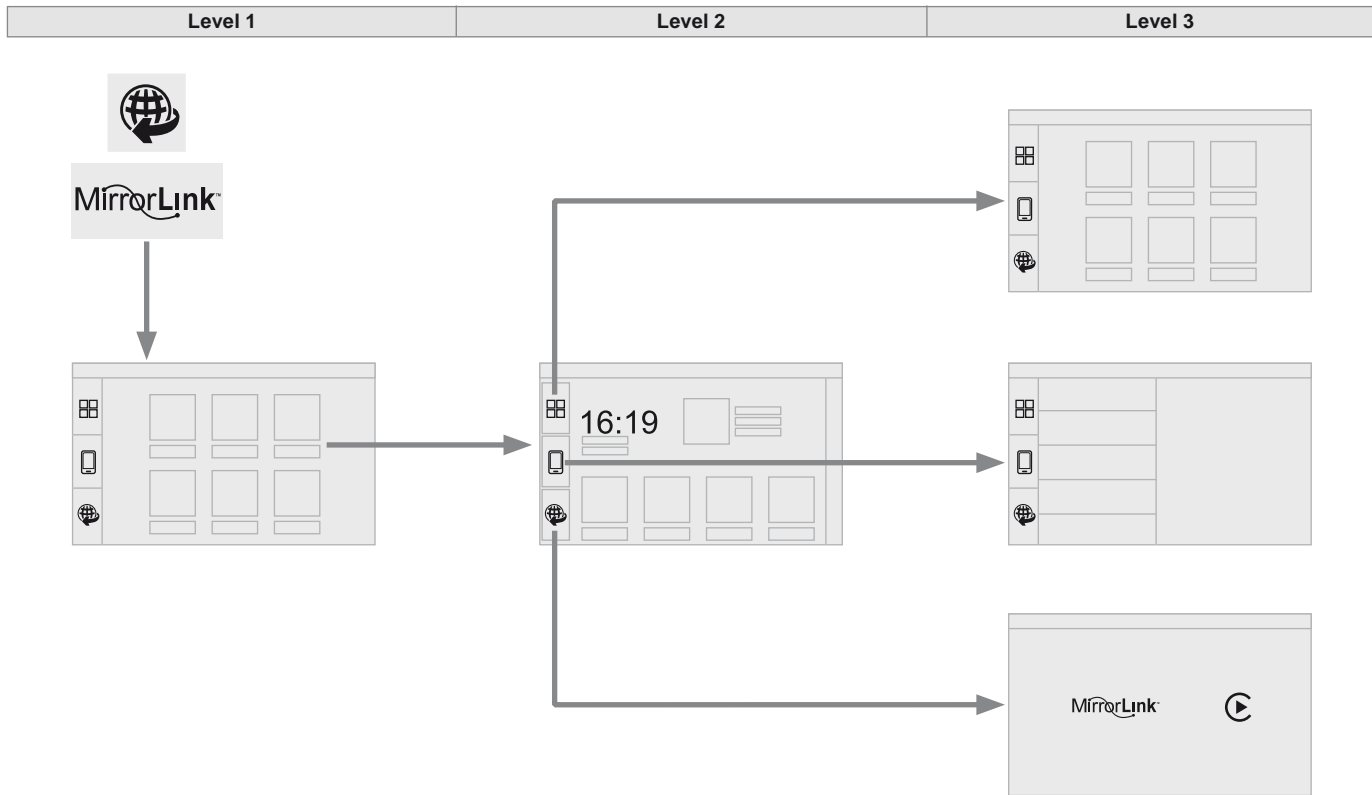
Press the end of the lighting control stalk to start voice recognition of your smartphone via the system.

Voice recognition requires a compatible smartphone connected to the vehicle by Bluetooth®.



Level 1		Level 2		Level 3		Comments
 	<p>Connected services</p> <p>↓</p> <p>MirrorLink™</p>					Access or return to the applications already downloaded to your smartphone and adapted to MirrorLink™ technology.
						Access to a menu list depending on the application chosen. "Back": abandon the current operation, go up one level. "Home": access or return to the "Car mode" page.
						Access to the "Connected services" primary page.

CarPlay®

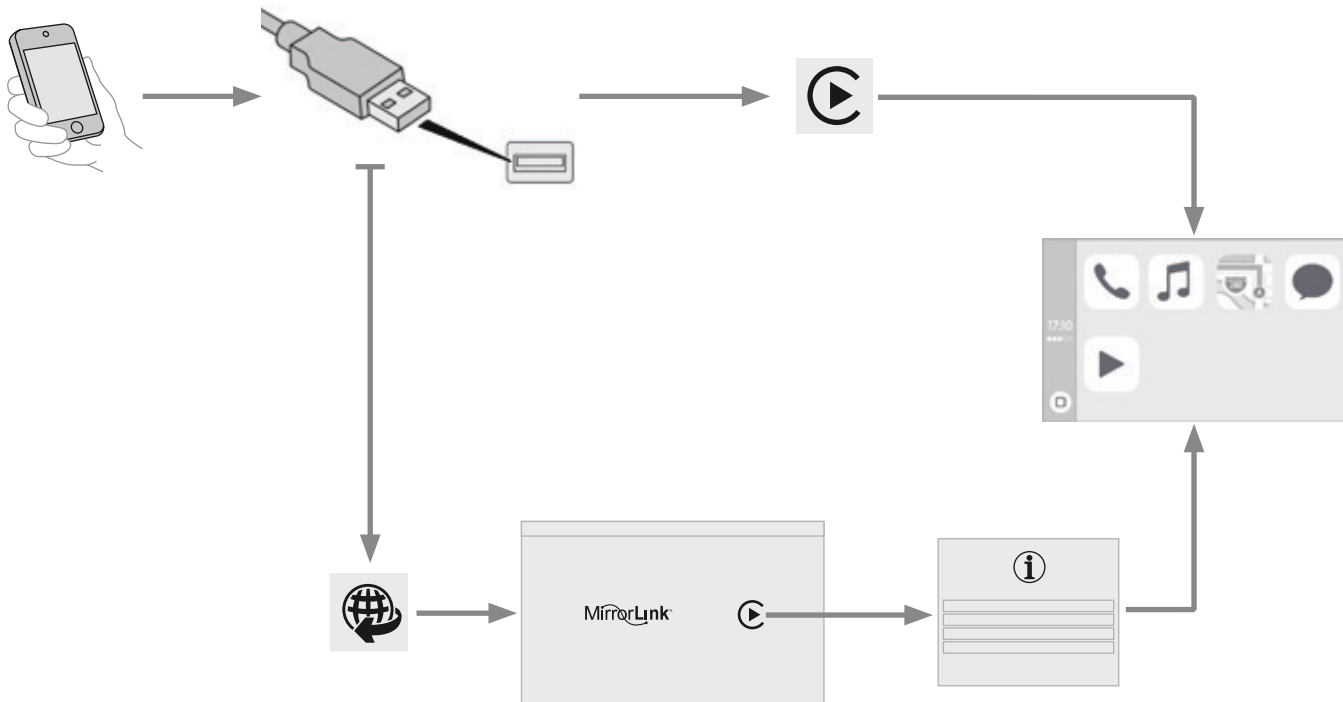

CarPlay® smartphone connection

! As a safety measure and because it requires sustained attention by the driver, using a smartphone when driving is prohibited. All operations must be done with the **vehicle stationary**.

i The synchronisation of a smartphone allows applications on a smartphone that are adapted to the CarPlay® technology to be displayed on the vehicle's screen. As the principles and standards are constantly evolving, it is recommended that you update the operating system of your smartphone. For the list of eligible smartphones, connect to the brand's internet website in your country.

i As a safety measure, applications can only be viewed with the vehicle stationary; display is interrupted once the vehicle is moving.



Connect a USB cable. The smartphone charges when connected by a USB cable.



On connecting the USB cable, the **"Telephone"** function changes to **"CarPlay"** in the menu carousel. Press on **"CarPlay"** to display the CarPlay® interface.

Or



Connect the USB cable. The smartphone is charged while connected by the USB cable.



From the system, press on **"Connected services"** to display the primary page.



Press on **"CarPlay"** to display the CarPlay® interface.

i

During the procedure, one or more screen pages relating to certain functions are displayed on connection.


When the telephone menu is displayed, connection of the USB cable causes the display to automatically change to CarPlay mode.









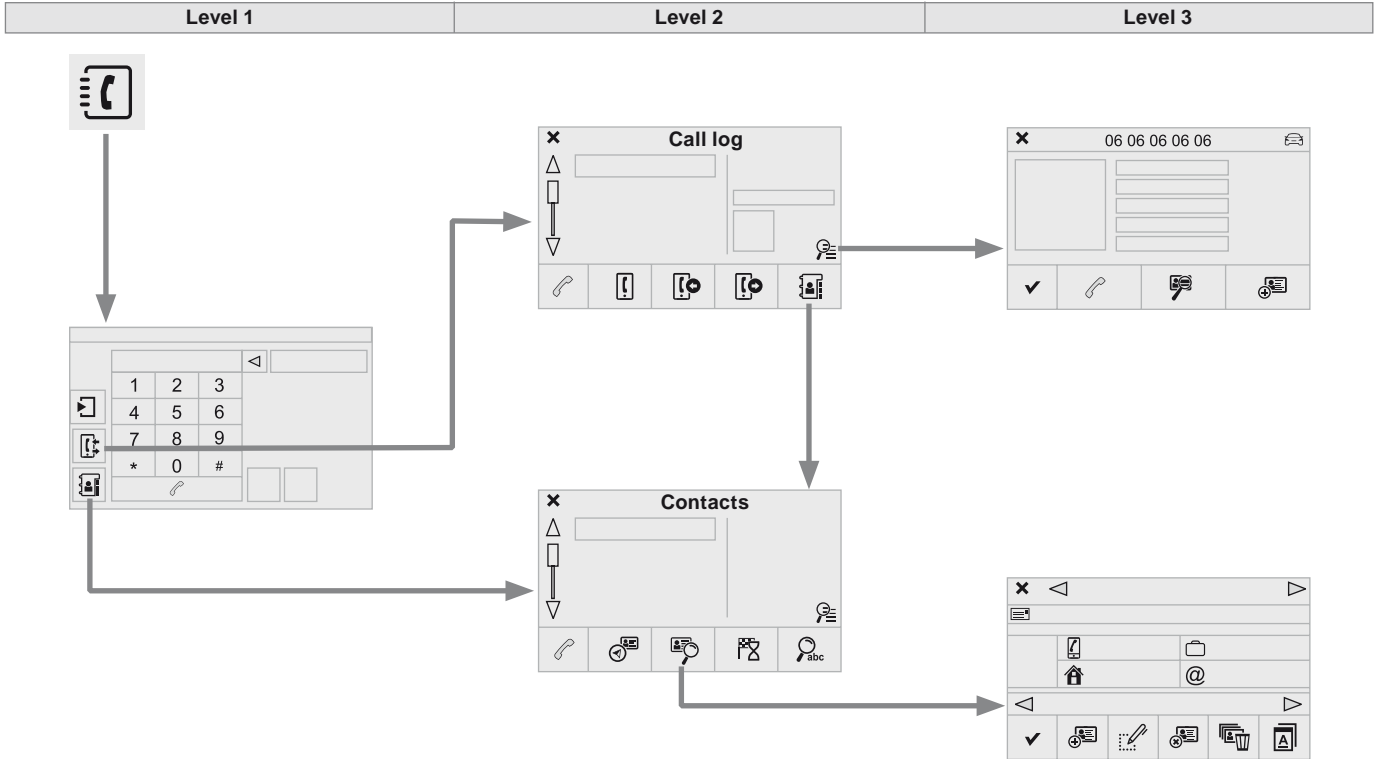














When another menu is displayed, on connection of a USB cable a message is displayed in the upper bar, indicating that CarPlay mode has been activated. Press Open to display CarPlay mode.


Voice recognition

 








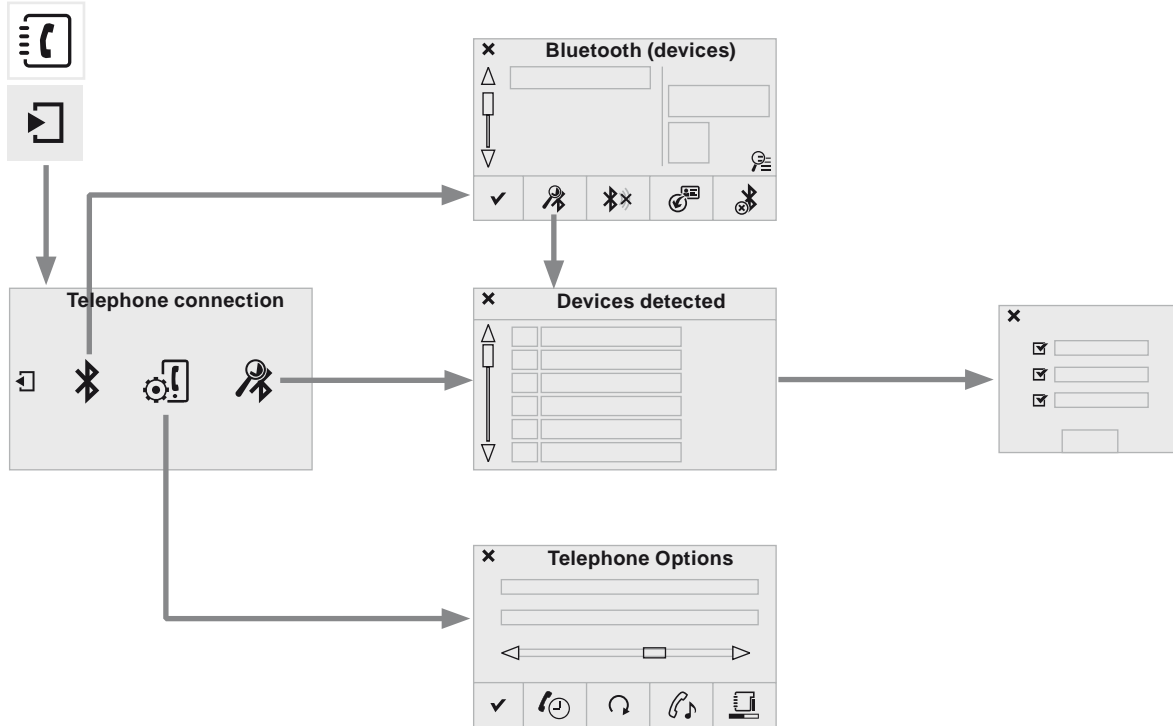


 






Press the end of the lighting control stalk to start voice recognition of your smartphone via the system.

Telephone



Level 1		Level 2		Level 3		Comments
 	<p>Telephone ↓ Call log</p>	 All calls				After making choices, start the call.
		 Incoming calls				
		 Outgoing calls				
		 Contacts				
		 Magnifying glass	 View			
			 Create			
 Call						
 	<p>Telephone ↓ Contacts</p>	 Addresses				After making choices, start the call.
		 View	 Create			
			 Modify			
			 Delete			
			 Delete all			
			 By name			
			 Confirm			
		 Navigate to				
		 Search for contact				
 Call						



Level 1		Level 2		Level 3		Comments
  	Telephone connection ↓ Secondary page ↓ Bluetooth connection	 Search				Start the search for another peripheral device to connect.
		 Connect / Disconnect				Start or stop the Bluetooth® connection to the selected peripheral device.
		 Update				Import the contacts from the selected telephone to store them in the audio system.
		 Delete				Delete the selected telephone.
		 Confirm				Save the settings.
  	Telephone connection ↓ Secondary page ↓ Search for devices			<input checked="" type="checkbox"/> Telephone		Start the search for peripheral devices.
			Devices detected	<input checked="" type="checkbox"/> Audio streaming		
				<input checked="" type="checkbox"/> Internet		
  	Telephone connection ↓ Secondary page ↓ Telephone Options	 Put on hold				Cut the microphone temporarily so that the contact cannot hear your conversation with a passenger.
		 Update				Import the contacts from the selected telephone to save then in the audio system.
		 Ringtones				Choose the telephone ringtone and volume.
		 Memory info.				Contact records used and free, percentage of storage space used by internal contacts and Bluetooth® contacts.
		 Confirm				Save the settings.

Pairing a Bluetooth® telephone

! For reasons of safety and because they require prolonged attention on the part of the driver, the operations for pairing the Bluetooth® mobile telephone to the hands-free system of the audio system must be carried out with the **vehicle stationary**.

Procedure (short) from the telephone

In the Bluetooth® menu of your device, select the system name in the list of devices detected.

Enter a code of at least 4 figures in the device and confirm.



Enter this same code in the system, select **"OK"** and confirm.

Procedure from the system

Activate the telephone's Bluetooth® function and ensure that it is "visible to all" (telephone configuration).



Press on **Telephone** to display the primary page.



Press on the secondary page.



 
Select **"Bluetooth connection"**.



Select **"Search for devices"**.
The list of telephones detected is displayed.



If the telephone is not detected, it is recommended that you switch the Bluetooth® function on your telephone off and then on again.



Select the name of the desired peripheral from the list and **"Confirm"**.



Enter a code of at least 4 figures for the connection then **"Confirm"**.

Enter this same code in the telephone then accept the connection.

The system offers to connect the telephone:

 
- in **"Telephone"** (hands-free kit, telephone only),
- in **"Audio streaming"** (streaming: wireless playing of audio files from the telephone),
- in **"Internet"** (internet browsing, only if your telephone is compatible with the "DUN" Dial-Up Networking Bluetooth® standard).

Select one or more profiles and confirm.

! The services available depend on the network, the SIM card and the compatibility of the Bluetooth® telephone used. Check the telephone manual and with your network provider for details of the services available to you.

! The ability of the system to connect with only one profile depends on the telephone. The three profiles may all connect by default.

Visit www.peugeot.co.uk for more information (compatibility, additional help, ...).



The recognised telephone appears in the list.

Depending on your telephone, you may be asked to accept automatic connection every time the ignition is switched on.

! Depending on the type of telephone, the system will ask you to accept or not the transfer of your contacts.



If not, select "**Update**".

On return to the vehicle, if the last telephone connected is present again, it is reconnected automatically and within around 30 seconds after switching on the ignition the pairing is done without any action on your part, with (Bluetooth® activated).

To modify the automatic connection mode, select the telephone in the list then select the desired profile.

Connecting a Bluetooth® peripheral device

Automatic reconnection

On switching on the ignition, the telephone connected when the ignition was last switched off is automatically reconnected, if this connection mode had been activated during the pairing procedure.

The connection is confirmed by the display of a message and the name of the telephone.

Manual connection



Press on **Telephone** to display the primary page.



Press on the secondary page.



Select "**Bluetooth**" to display the list of paired peripherals.

Select the peripheral to connect.



Press on "**Search for devices**".

The connection is confirmed by the display of a message and the name of the telephone.

Managing paired telephones

i This function allows the connection or disconnection of a peripheral device as well as the deletion of a pairing.



Press on **Telephone** to display the primary page.



Press on the secondary page.



Select "**Bluetooth**" to display the list of paired peripheral devices.

Select the peripheral in the list.



Select "**Search for devices**"

Or



"**Connect / Disconnect**" to start or end the Bluetooth connection with the selected device.

Or



"**Delete**" to delete the pairing.

Receiving a call

An incoming call is announced by a ring and a superimposed display in the screen.



Make a short press on the steering mounted **TEL** button to accept an incoming call.



Make a long press



on the steering mounted **TEL** button to reject the call.

Or



Select "**End call**".

Making a call

! Using the telephone is not recommended while driving. Park the vehicle. Make the call using the steering mounted controls.

Calling a new number



Press on **Telephone** to display the primary page.



Enter the phone number using the digital keypad. Press "**Call**" to start the call.

Calling a contact



Press on **Telephone** to display the primary page.



Or make a long press



on the steering mounted **TEL** button.



Select "**Contacts**".

Select the desired contact from the list offered.



Select "**Call**".

Calling a recently used number



Press on **Telephone** to display the primary page.



Select "**Call log**".

Select the desired contact from the list offered.



It is always possible to make a call directly from the telephone; park the vehicle first as a safety measure.

Managing contacts / entries



Press on **Telephone** to display the primary page.



Select "**Contacts**".



Select "**View**".



Select "**Create**" to add a new contact, observing the "international format".

Or



"**Modify**" to edit the selected contact.

Or



"**Delete**" to delete the selected contact.

Or



"**Delete all**" to delete all information for the selected contact.



Select "**By name**" to view the list of contacts.

Frequently asked questions

The table below gives answers to the most frequently asked questions on your audio system.

Navigation

QUESTION	ANSWER	SOLUTION
The route calculation is not successful.	The navigation settings may conflict with the current location (exclusion of toll roads on a toll motorway).	Check the settings in the "Navigation" menu.
The POIs do not appear.	The POIs have not been selected.	Select the POIs in the list of POIs.
The Risk areas audible warning does not work.	The audible warning is not active.	Activate audible warnings in the "Navigation" menu.
The system does not suggest a detour around an incident on the route.	The guidance criteria do not take account of TMC messages.	Select the "Information" function in the list of guidance criteria.
I receive a Risk areas alert which is not on my route.	Other than guidance, the system announces all Risk areas positioned in a cone located in front of the vehicle. It may provide an alert for Risk areas located on nearby or parallel roads.	Zoom in on the map to view the exact position of the Risk areas. Select "On the route" to no longer receive alerts other than guidance or to reduce the time for the announcement.

QUESTION	ANSWER	SOLUTION
Certain traffic jams along the route are not indicated in real time.	On starting, it is several minutes before the system begins to receive the traffic information.	Wait until the traffic information is being received correctly (display of the traffic information icons on the map).
	The filters are too restrictive.	Modify the settings.
	In certain countries, only major routes (motorways...) are listed for the traffic information.	This phenomenon is normal. The system is dependent on the traffic information available.
The altitude is not displayed.	On starting, the initialisation of the GPS may take up to 3 minutes to receive more than 4 satellites correctly.	Wait until the system has completed starting up, so that there is GPS coverage of at least 4 satellites.
	Depending on the geographical environment (tunnel...) or the weather, the conditions of reception of the GPS signal may vary.	This phenomenon is normal. The system is dependent on the GPS signal reception conditions.

Radio

QUESTION	ANSWER	SOLUTION
<p>The quality of reception of the radio station listened to gradually deteriorates or the stored stations do not function (no sound, 87.5 Mhz is displayed...).</p>	<p>The vehicle is too far from the transmitter used by the station listened to or there is no transmitter in the geographical area through which the vehicle is travelling.</p>	<p>Activate the "RDS" function by means of the short-cut menu to enable the system to check whether there is a more powerful transmitter in the geographical area.</p>
	<p>The environment (hills, buildings, tunnels, basement car parks...) block reception, including in RDS mode.</p>	<p>This phenomenon is normal and does not indicate a fault with the audio system.</p>
	<p>The aerial is absent or has been damaged (for example when going through a car wash or into an underground car park).</p>	<p>Have the aerial checked by a PEUGEOT dealer.</p>
<p>I cannot find some radio stations in the list of stations received.</p>	<p>The station is not received or its name has changed in the list.</p>	<p>Press on the "Update list" function in the system to update the list of stations received.</p>
	<p>Some radio stations send other information in place of their name (the title of the song for example). The system interprets this information as the name of the station.</p>	

Media

QUESTION	ANSWER	SOLUTION
Playback of my USB memory stick starts only after a very long wait (around 2 to 3 minutes).	Some files supplied with the memory stick may greatly slow down access to reading the memory stick (multiplication by 10 of the catalogue time).	Delete the files supplied with the memory stick and limit the number of sub-folders in the file structure on the memory stick.
When I connect my iPhone as telephone and to the USB port at the same time, I am unable to play the music files.	When the iPhone connects automatically as a telephone, it forces the streaming function. The streaming function takes the place of the USB function which is then not useable, there is a period without sound of the track being played with Apple® players.	Disconnect and reconnect to the USB port (the USB function takes priority over streaming).
Some characters in the media information are not displayed correctly while playing.	The audio system does not display some types of characters.	Use standard characters to name tracks and folders.
Playing of streaming files does not start.	The peripheral device connected does not support automatic play.	Start the playback from the device.
The names of tracks and the track length are not displayed on the screen when streaming audio.	The Bluetooth profile does not allow the transfer of this information.	

Settings

QUESTION	ANSWER	SOLUTION
<p>In changing the setting of treble and bass the equalizer setting is deselected.</p>	<p>The selection of an equalizer setting imposes the balance settings. Modifying one without the other is not possible.</p>	<p>Modify the balance or equalizer settings to obtain the desired musical ambience.</p>
<p>In changing the equalizer setting, treble and bass return to zero.</p>		
<p>When changing the balance settings, the distribution setting is deselected.</p>	<p>The selection of a distribution setting imposes the balance settings. Modifying one without the other is not possible.</p>	<p>Modify the balance or distribution settings to obtain the desired musical ambience.</p>
<p>When changing a sound distribution setting, the balance setting is deselected.</p>		
<p>When I select the "All passengers" mode, the distribution is not as I would like.</p>	<p>The choice of an "All passengers" distribution can be programmed.</p>	<p>Modify the distribution setting using the slider on the touch screen.</p>

QUESTION	ANSWER	SOLUTION
<p>There is a difference in sound quality between the different audio sources.</p>	<p>For optimum sound quality, the audio settings for Volume:, Bass:, Treble:, Ambience and Loudness can be adapted to the different sound sources, which may result in audible differences when changing source.</p>	<p>Check that the audio settings for (Volume:, Bass:, Treble:, Ambience, Loudness) are adapted to the sources listened to. It is advisable to set the audio functions (Bass:, Treble:, Balance) to the middle position, select the "None" musical ambience and set the loudness correction to the "Inactive" position in radio mode.</p>
<p>With the engine off, the system switches off after a few minutes of use.</p>	<p>When the engine is switched off, the system's operating time depends on the state of charge of the battery. The switch-off is normal: the system switches to economy mode and switches off to prevent discharging of the vehicle's battery.</p>	<p>Start the vehicle's engine to increase the battery charge.</p>

Telephone

QUESTION	ANSWER	SOLUTION
I cannot connect my Bluetooth telephone.	The telephone's Bluetooth function may be switched off or the telephone may not be visible.	Check that your telephone's Bluetooth function is switched on. Check in the telephone settings that it is "Visible to all".
	The Bluetooth telephone is not compatible with the system.	You can check the compatibility of your telephone at www.peugeot.co.uk (services).
The volume of the telephone connected in Bluetooth mode is inaudible.	The volume depends both on the system and on the telephone.	Increase the volume of the audio system, to maximum if required, and increase the volume of the telephone if necessary.
	The ambient noise level has an influence on the quality of telephone communication.	Reduce the ambient noise level (close the windows, reduce the booster fan speed, slow down...).
Some contacts are duplicated in the list.	The options for synchronizing contacts are synchronizing the contacts on the SIM card, the contacts on the telephone, or both. When both synchronizations are selected, some contacts may be duplicated.	Select "Display SIM card contacts" or "Display telephone contacts".
Contacts are not shown in alphabetical order.	Some telephones offer display options. Depending on the settings chosen, contacts can be transferred in a specific order.	Modify the display setting in the telephone directory.
The system does not receive SMS text messages.	The Bluetooth mode does not permit sending SMS text messages to the system.	



MM-BTEL
SMEG+ IV2



COFETEL : RCPMASM15-1111

La operación de este equipo está sujeta a las siguientes dos condiciones: (1) es posible que este equipo o dispositivo no cause interferencia perjudicial y (2) este equipo o dispositivo debe aceptar cualquier interferencia, incluyendo la que pueda causar su operación no deseada.
The operation of this equipment is subject to the following two conditions: (1) it is possible that this equipment or device may not cause harmful interference, and (2) the equipment or device must accept any interference, including interference that may cause undesired operation.



Class A Equipment (Industrial Broadcasting & Communication Equipment).
이 기기는 업무용(A급) 전자기 적합기기(로세 판매자 또는 사용자는 이 점을 주의하시기 바라며, 가전과의 지역에서 사용하는 것을 목적으로 합니다.)

MSIP -CMM-RX2-SMEGIV2

סמך אישור אלקטרוני של משרד התקשורת הוא 51-52173

אנא להחליף את האנמנת הספציפית של המכשיר, ולא לעשות בו כל שינוי טכני אחר



INDOTEL identification for Dominican republic

CONATEL : 2015-06-I-0000190


Aprobado CNC C-14786

INCM: 16EBP15

TRC/SS/2015/258



R 005-101030
T AD15-0101005

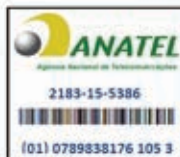

41554/SDPPI/2015
5142





Agréé par l'ARPT.
Référence d'agrément :
721/IR/AGR/PC/ARPT/2015



Este equipamento opera em caráter secundário, isto é, não tem direito à proteção contra interferência prejudicial, mesmo de estações do mesmo tipo e não pode causar interferência a sistemas operando em caráter primário.

 PD 2795



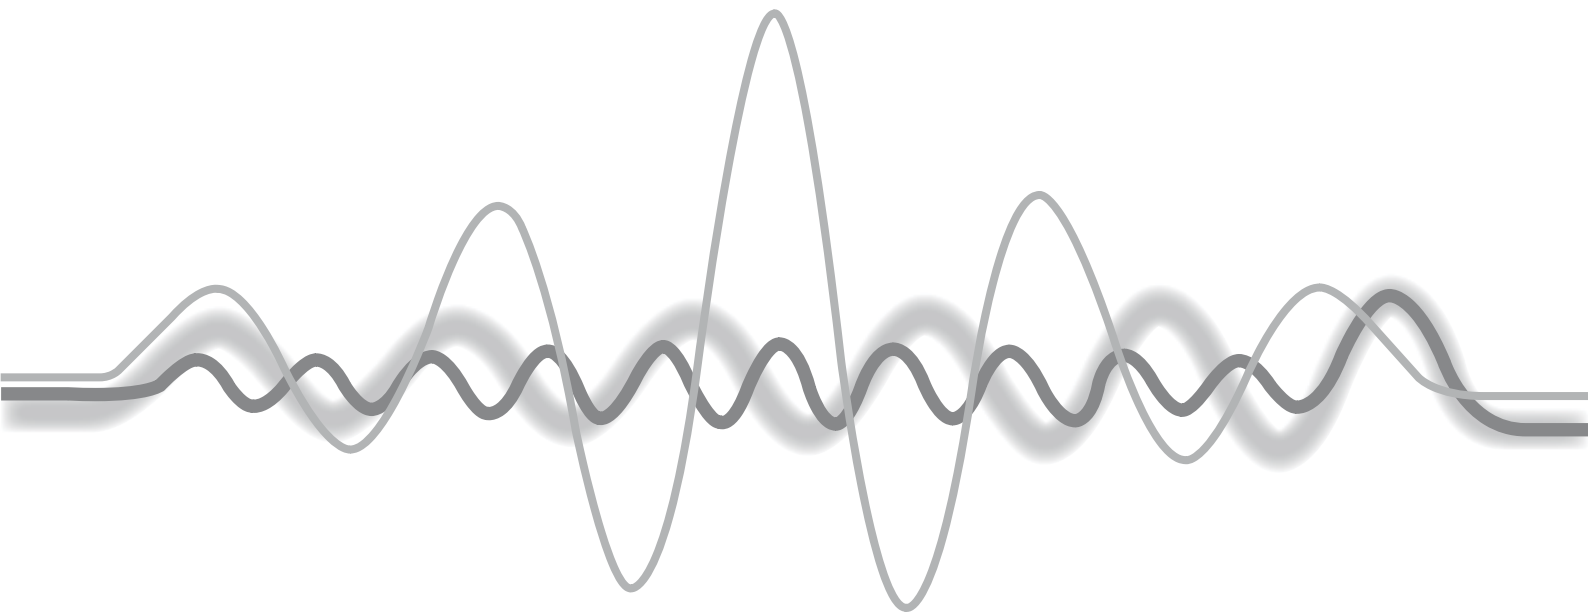

PEUGEOT Connect Sound (RD5)

Audio system / Bluetooth®



	Contents
First steps	266
Steering mounted controls	267
Menus	268
Radio	268
Media	270
Telephone	274
Screen menu map(s)	276
Frequently asked questions	280

i Your PEUGEOT Connect Sound (RD5) is coded in such a way that it will only operate in your vehicle.

! As a safety measure, the driver must only carry out operations which require prolonged attention while the vehicle is stationary. When the engine is switched off and to prevent discharging of the battery, the audio equipment may switch off after a few minutes.

First steps



On / Off, volume setting.

SOURCE

Select source:
Radio; USB; AUX; CD; Streaming.



Audio settings:
Front/rear fader, left/right balance,
bass/treble, loudness, audio
ambiences.

**LIST
REFRESH**

Display the list of local stations.
Long press: CD tracks or MP3 folders
(CD / USB).

MODE

Select the screen display mode:
Date, audio functions, trip computer,
telephone.

DARK

The DARK button changes the
screen display for improved driving
comfort at night.
1st press: upper bar only illuminated.
2nd press: black screen.
3rd press: return to standard display.



Abandon the current operation.

MENU

Display main menu.

1

Buttons 1 to 6
Select a pre-set radio station.
Long press: pre-set a station.



Automatic frequency search down/up.
Select previous/next CD, MP3 or
USB track.



Select next frequency down/up.
Select previous/next MP3 folder.
Select previous/next folder / genre /
artist / playlist (USB).

OK

Confirm.

TA / PTY

TA (Traffic Announcements) on/off.
Long press: PTY* (radio Programme
Type).



Eject CD.

**BAND
AST**

Select AM / FM wavebands.

* Available according to version.

Steering mounted controls



Radio: select the previous/next pre-set station.
 USB: select genre / artist / folder from the classification list.
 Select the previous/next item in a menu.



Radio: automatic search for a higher frequency.
 CD / MP3 / USB: select the next track.
 CD / USB: continuous press: fast forward.
 Move in the list.



Change audio source.
 Confirm a selection.
 Call/end call on the telephone.
 Press for more than 2 seconds: telephone main menu.



Radio: automatic search for a lower frequency.
 CD / MP3 / USB: select the previous track.
 CD / USB: continuous press: rewind.
 Move in the list.



Volume increase.



Volume decrease.



Mute: press the volume increase and decrease buttons simultaneously.
 The sound is restored by pressing one of the two volume buttons.

Menus

Screen C



Audio functions

Radio; CD; USB; AUX.



Trip computer

Enter distances; Alerts; State of functions.



Bluetooth®: Telephone - Audio

Pairing; Hands-free kit; Streaming.



Personalisation-configuration

Vehicle parameters; Display; Languages.

Screen A



For an overview of the menus available, refer to the "Screen menu map" section.

Radio

Selecting a station



Press the **SOURCE** button several times in succession and select the radio.



Press the **BAND AST** button to select a waveband.



Briefly press one of the buttons to carry out an automatic search of the radio stations.



Press one of the buttons to carry out a manual search up / down for radio frequencies.



Press the **LIST REFRESH** button to display the list of stations received locally (30 stations maximum). To update this list, press for more than two seconds.

RDS

i The external environment (hills, buildings, tunnels, basement car parks, ...) may block reception, including in RDS mode. This is a normal effect of the way in which radio waves are transmitted and does not indicate any failure of the audio system.

MENU

Press the **MENU** button.



Select "**Audio functions**".

OK

Press **OK**.



Select the "**FM waveband preferences**" function.

OK

Press **OK**.



Select "**Activate RDS**".

OK

Press **OK**, RDS is displayed in the screen.

In "**Radio**" mode, press **OK** directly to activate / deactivate RDS mode.



RDS, if displayed, enables you to continue listening to the same station by automatic retuning to alternative frequencies. However, in certain conditions, coverage of an RDS station may not be assured throughout the country as radio stations do not cover 100 % of the territory. This explains the loss of reception of a station that can occur during a journey.

Receiving TA messages



The TA (Traffic Announcement) function gives priority to TA alert messages. To operate, this function needs good reception of a radio station transmitting this type of message. When a traffic report is transmitted, the current audio source (Radio, CD, ...) is interrupted automatically to play the TA message. Normal playback of the audio source resumes at the end of the transmission of the message.

TA / PTY


Press the **TA** button to activate or deactivate traffic messages.

Media

USB port



This unit consists of a USB port and an auxiliary Jack socket, depending on model.

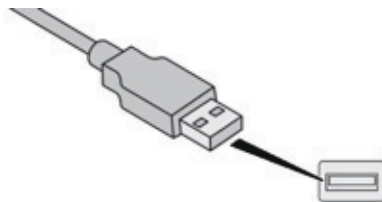

Insert a USB memory stick into the USB port or connect a USB peripheral device to the USB port using a suitable cable (not supplied).

! To protect the system, do not use a USB hub.



Press and hold **REFRESH LIST** to display the different classifications.



Select by "**Folder**" / "**Artist**" / "**Genre**" / "**Playlist**".



Press **OK** to select the classification required, then press **OK** again to confirm.



Press **REFRESH LIST** briefly to display the previously selected classification.



Navigate through the list using the left / right and up / down buttons.



Confirm the selection by pressing **OK**.



Press one of these buttons to gain access to the previous / next track in the list. Press and hold one of the buttons for fast forward or rewind.



Press one of these buttons to gain access to the previous / next "**Folder**" / "**Artist**" / "**Genre**" / "**Playlist**" in the list.

Auxiliary socket (AUX)



Connect the portable device (MP3 player, ...) to the auxiliary Jack socket using an audio cable (not supplied).

Press the **SOURCE** button several times in succession and select **AUX**.

First adjust the volume on your portable device (to a high level). Then adjust the volume on your audio system. Operation of controls is via the portable device.

! Do not connect a device to both the Jack auxiliary socket and the USB port at the same time.

CD player

Insert circular compact discs only. Some anti-pirating systems, on original discs or CDs copied using a personal recorder, may cause faults which are no reflection on the quality of the vehicle's player. Insert a CD in the player, play begins automatically.

SOURCE

To play a disc which has already been inserted, press the **SOURCE** button several times in succession and select **CD**.



Press one of the buttons to select a track on the CD.

**LIST
REFRESH**

Press the **LIST REFRESH** button to display the list of tracks on the CD.



Press and hold one of the buttons for fast forward or rewind.

Playing an MP3 CD compilation

Insert an MP3 CD compilation in the player. The audio equipment searches for all of the music tracks, which may take anything between a few seconds and several tens of seconds, before play begins.

! On a single disc, the CD player can read up to 255 MP3 files spread over 8 folder levels. However, it is advisable to keep to a limit of two levels to reduce the access time before the CD is played.

While the CD is being played, the folder structure is not followed. All of the files are displayed on a single level.

SOURCE

To play a disc which has already been inserted, press the **SOURCE** button several times in succession and select **CD**.



Press one of the buttons to select a folder on the CD.



Press one of the buttons to select a track on the CD.



Press the **LIST REFRESH** button to display the list of directories of the MP3 compilation.



Press and hold one of the buttons for fast forward or rewind play.

Information and advice

The audio system will only play files with the extension ".mp3" with a sampling rate of 22.05 KHz or 44.1 KHz. No other type of file (.wma, .mp4, .m3u, etc.) can be played.

It is advisable to restrict file names to 20 characters without using special characters (e.g. " ? ; ù) to avoid any playing or displaying problems.

In order to be able to play a recorded CDR or CDRW, when recording, the ISO 9660 level 1. 2 or Joliet file format is recommended. If the disc is recorded in another format, it may not be played correctly.

It is recommended that the same recording format is always used for an individual disc, with as low a speed as possible (4x maximum) for optimum sound quality.

In the particular case of a multi-session CD, the Joliet format is recommended.

Use only USB memory sticks formatted FAT32 (File Allocation Table).

! To protect the system, do not use a USB hub.

i It is recommended that you use genuine Apple® USB cables for correct operation.

Bluetooth® audio streaming

Streaming allows music files on the telephone to be played via the audio system.

Connect the telephone: see the "**Telephone**" section.

Select in the "**Bluetooth: Telephone - Audio**" menu the telephone to be connected. The audio system connects to a newly paired telephone automatically.

SOURCE Activate the streaming source by pressing the **SOURCE*** button.

Control of tracks to be played is via the buttons on the audio system control panel and the steering mounted controls**. The contextual information can be displayed in the screen.

* In certain cases, play of the audio files must be initiated from the keypad.

** If the telephone supports the function.

Connecting Apple® players

Connect the Apple® player to the USB port using a suitable cable (not supplied). Play starts automatically.

Control is via the audio system.

The classifications available are those of the portable device connected (artists / albums / genres / playlists / audiobooks / podcasts).

The version of software in the audio system may not be compatible with the generation of your Apple® player.

Telephone

Pairing a Bluetooth® telephone

Screen C

(Available according to model and version)

! As a safety measure and because they require prolonged attention on the part of the driver, the operations for pairing of the Bluetooth® mobile telephone with the Bluetooth® hands-free system of your audio equipment must be carried out with the vehicle stationary and the ignition on.

Go to www.peugeot.co.uk for more information (compatibility, more help, ...).

Activate the telephone's Bluetooth® function and ensure that it is "visible to all" (telephone configuration).

Press the **MENU** button.



In the menu, select:

- "Bluetooth: Telephone - Audio"
- "Bluetooth configuration"
- "Perform a Bluetooth search"

A window is displayed with a message that a search is in progress.

i The services available depend on the network, the SIM card and the compatibility of the Bluetooth® device used. Consult your telephone's manual and your operator to find out which services are available to you.

The first 4 telephones recognised are displayed in this window.

The "**Telephone**" menu permits access to the following functions in particular: "**Directory**"*, "**Calls list**", "**Consult the paired equipment**".

* If your telephone is fully compatible.

Select the telephone to be connected from the list. Only one telephone can be connected at a time.



A virtual keypad is displayed in the screen: enter a code with at least 4 digits.



Confirm by pressing **OK**.

A message in the screen indicates the telephone chosen. To accept the pairing, enter the same code on the telephone, then confirm with **OK**. If pairing fails, the number of attempts is not limited.

A message that the pairing has been successful appears in the screen.

The automatic connection authorised is only active after the telephone has been configured. The directory and the call list can be accessed after the necessary synchronisation period.

Receiving a call

An incoming call is announced by a ring and a superimposed display in the screen.



Select the **YES** tab on the display using the buttons.

OK

Confirm by pressing **OK**.



Press this button at the steering mounted controls to accept the call.

Making a call

From the "**Bluetooth: Telephone - Audio**" menu.

Select "**Manage the telephone call**".

Select "**Call**".

Or

Select "**Calls list**".

Or

Select "**Directory**".



Press this button for more than two seconds for access to your directory, then navigate using the thumbwheel.

Or

To dial a number, use your telephone's keypad, with the vehicle stationary.

Ending a call



During a call, press this button for more than 2 seconds.

Confirm with **OK** to end the call.

i The system accesses the telephone's contacts directory, depending on its compatibility, and while it is connected by Bluetooth®.

i With certain telephones connected by Bluetooth® you can send a contact to the directory of the audio system. Contacts imported in this way are saved in a permanent directory visible to all, whatever the telephone connected. The menu for the directory is not accessible if it is empty.

Screen menu map(s)

Screen A

1 Radio-CD

2 RDS options

2 REG mode

2 CD repeat

2 Shuffle play

1 Vehicle config*

2 R wiper in rev

2 Guide lighting

1 Options

2 Diagnostic

3 View

3 Abandon

1 Units

2 Temperature: °Celsius / °Fahrenheit

2 Fuel consumption: KM/L - L/100 - MPG

1 Display adjust

2 Year

2 Month

2 Day

2 Hour

2 Minutes

2 12 H/24 H mode

1 Language

2 Français

2 Italiano

2 Nederlands

2 Português

2 Português do Brasil

2 Deutsch

2 English

2 Español

2 Čeština

2 Hrvatski

2 Magyar

* The settings vary according to the trim level of the vehicle.

Screen C

OK

Press the **OK** dial for access to short-cut menus according to the display on the screen.

Radio

- 1** activate / deactivate RDS
- 1** activate / deactivate REG mode
- 1** activate / deactivate radiotext

CD / MP3 CD

- 1** activate / deactivate Intro
- 1** activate / deactivate track repeat
(the entire current CD for CD, the entire current folder for MP3 CD)
- 1** activate / deactivate random play
(the entire current CD for CD, the entire current folder for MP3 CD)

USB

- 1** activate / deactivate track repeat
(of the current folder / artist / genre / playlist)
- 1** activate / deactivate random play
(of the current folder / artist / genre / playlist)

Screen C

Pressing the **MENU** button displays:

MENU



Audio functions

- 1 **Audio functions**
- 2 **FM preferences**
 - 3 Alternative frequencies (RDS)
 - 4 Activate / deactivate
 - 3 Regional mode (REG)
 - 4 Activate / deactivate
 - 3 Radio-text information (RDTXT)
 - 4 Activate / deactivate

- 2 **Play modes**
 - 3 Album repeat (RPT)
 - 4 Activate / deactivate
 - 3 Track random play (RDM)
 - 4 Activate / deactivate



Trip computer

- 1 **Enter distance to destination**
- 2 Distance: x miles
- 1 **Warning log**
- 2 **Vehicle diagnosis**
- 1 **State of systems**
- 2 **Systems activated or deactivated**



Personalisation-configuration

1 **Define the vehicle parameters***

1 **Display configuration**

2 **Brightness-video adjustment**

3 Normal video

3 Inverse video

3 Brightness (- +) adjustment

2 **Date and time adjustment**

3 Setting the day/month/year

3 Setting the hour/minute


3 Choice of 12 h / 24 h mode

2 **Choice of units**

3 l/100 km - mpg - km/l

3 °Celsius / °Fahrenheit

1 **Choice of language**



Bluetooth: Telephone - Audio

1 **Bluetooth configuration**

2 **Connect/Disconnect an equipment**

2 **Telephone function**

2 **Audio Streaming function**

3 Consult the paired equipment

3 Delete a paired equipment

3 Perform a Bluetooth search

1 **Call**

2 **Calls list**

3 Directory

1 **Manage the telephone call**

2 **Terminate the current call**

2 **Activate secret mode**

* The settings vary according to vehicle.

Frequently asked questions

The table below gives answers to the most frequently asked questions on your audio system.

QUESTION	ANSWER	SOLUTION
With the engine off, the audio system switches off after a few minutes of use.	When the engine is switched off, the audio system operating time depends on the state of charge of the battery. The switch-off is normal: the audio equipment switches to economy mode and switches off to prevent discharging of the vehicle's battery.	Start the vehicle's engine to increase the battery charge.
The message "the audio system is overheated" appears on the display.	In order to protect the installation if the surrounding temperature is too high, the audio system switches to an automatic thermal protection mode leading to a reduction in volume or CD play stopping.	Switch the audio system off for a few minutes to allow the system to cool.

Radio

QUESTION	ANSWER	SOLUTION
There is a difference in sound quality between the different audio sources (radio, CD...).	For optimum sound quality, the audio settings (Volume, Bass, Treble, Ambience, Loudness) can be adapted to the different sound sources, which may result in audible differences when changing source (radio, CD...).	Check that the audio settings (Volume, Bass, Treble, Ambience, Loudness) are adapted to the sources listened to. It is advisable to set the audio functions (Bass, Treble, Front-Rear Balance, Left-Right Balance) to the middle position, select the musical ambience "None" and set the loudness correction to the "Active" position in CD mode or to the "Inactive" position in radio mode.

QUESTION	ANSWER	SOLUTION
The stored stations do not function (no sound, 87.5 Mhz is displayed...).	An incorrect waveband is selected.	Press the BAND AST button to return to the waveband (AM, FM1, FM2, FMAST) on which the stations are stored.
The traffic announcement (TA) is displayed. I do not receive any traffic information.	The radio station is not part of the regional traffic information network.	Tune to a radio station which broadcasts traffic information.
The quality of reception of the radio station listened to gradually deteriorates or the stored stations do not function (no sound, 87.5 Mhz is displayed...).	The vehicle is too far from the transmitter used by the station listened to or there is no transmitter in the geographical area through which the vehicle is travelling.	Activate the RDS function to enable the system to check whether there is a more powerful transmitter in the geographical area.
	The environment (hills, buildings, tunnels, underground car parks...) block reception, including in RDS mode.	This phenomenon is normal and does not indicate a failure of the audio equipment.
	The aerial is absent or has been damaged (for example when going through an automatic car wash or into an underground car park).	Have the aerial checked by a PEUGEOT dealer.
Sound cut-outs of 1 to 2 seconds in radio mode.	During this brief sound cut-out, the RDS searches for another frequency giving better reception of the station.	Deactivate the RDS function if the phenomenon is too frequent and always on the same route.

Media

QUESTION	ANSWER	SOLUTION
The message "USB peripheral error" is displayed on the screen. The Bluetooth® connection is cut.	The battery of the peripheral may not be sufficiently charged.	Recharge the battery of the peripheral device.
	The USB memory stick is not recognised. The USB memory stick may be corrupt.	Reformat the USB memory stick.
The CD is ejected automatically or is not played by the player.	The CD is inserted upside down, is unplayable, does not contain any audio data or contains an audio format which the player cannot play. The CD is protected by an anti-pirating protection system which is not recognised by the audio equipment.	<ul style="list-style-type: none"> - Check that the CD is inserted in the player the right way up. - Check the condition of the CD: the CD cannot be played if it is too damaged. - Check the content in the case of a recorded CD: consult the advice in the "Audio" section. - The audio equipment's CD player does not play DVDs. - Due to their quality level, certain writeable CDs will not be played by the audio system.
The CD player sound is poor.	The CD used is scratched or of poor quality.	Insert good quality CDs and store them in suitable conditions.
	The audio equipment settings (bass, treble, ambiances) are unsuitable.	Set the treble or bass level to 0, without selecting an ambience.

Telephone

QUESTION	ANSWER	SOLUTION
I am unable to access my voicemail.	Few telephones or service providers allow the use of this function.	